

**OPERATING INSTRUCTIONS
AND
MAINTENANCE MANUAL
FOR**

MODEL HC150-1P*

(* PUMP MODEL VARIES)

**FLUID POWERED
ADDITIVE INJECTOR CART**

Manufactured by:



HAMMONDS TECHNICAL SERVICES, INC.

6807 West Little York Rd.
Houston, Texas 77040

Phone: 281-999-2900
Fax: 713-896-9419

www.hammondscos.com

December 2021

Hammonds Model HC150-1P Injector Cart Manual

TABLE OF CONTENTS

Special Notice to Users	3
Installation and Preparation for Startup	3-4
Preparation for Calibration and Startup	4
Calibration and Startup	5-7
Additive Chart	8
Trouble Shooting the System	8-9
Preventive Maintenance	9-10
Preventive Maintenance Schedule	10
Desiccant Dryer Instructions	11

Attachments:

- HC150 Additive Cart Layout
- Hydraulic Schematic
- Model 150 Driver
- Injector Pumps
- Calibration Gauge Parts
- Calibration Gauge Instructions
- Tank Assembly
- Grounding Reel Instructions
- Fueling Nozzle

Hammonds Model HC150-1P Injector Cart Manual

SPECIAL NOTICE TO USERS PLEASE READ CAREFULLY BEFORE OPERATING EQUIPMENT

This additive injector system is designed to give consistent dependable performance when operated and maintained according to manufacturer's recommendations. However, being a mechanical device, it is subject to failure from improper installation, wear, human error and operating environments beyond the control of the system. Because of this fact, it is the responsibility of the operator to make certain that:

- A. The system is installed properly.
- B. The system is being operated properly.
- C. The system is actually running during product transfer.
- D. The system is checked after the transfer operation to make certain the proper amount of additive was injected during the operation.

The performing of these checks by the operator eliminates the possibility of product not having the proper additive ratio as required. Therefore, since the manufacturer cannot be present during each transfer operation, the responsibility for checking the performance of the system is that of the operator. Should there be any questions whatsoever, the operator should consult the distributor from whom the unit was purchased.

Do Not Take Chances.....Do Not Guess.....Be Absolutely Certain That The System Is Installed And Working As It Should.

The user/operator carries the final responsibility to make certain the system is operating properly.

INSTALLATION AND PREPARATION FOR STARTUP

In most cases, the Hammonds fluid powered injector is shipped complete and ready to operate. The system should include appropriate fittings to suit your specific application. Flow direction is marked on additive pumps and check valves.

FLOW CONSIDERATIONS

The Hammonds Model 150 requires a minimum of 7 and up to 75 GPM to deliver consistent ratios. This does not mean that the system cannot be used in cases where startup and shutdown fall under the 7 GPM minimum. However, these installations require calibration to compensate for the lower flow rates during

these periods of operation. Check with the factory if you have any questions in the area of performance.

MATERIALS OF CONSTRUCTION

The standard material in a Hammonds Model 150 fluid driver is anodized cast aluminum housing. Optional material is carbon steel.

CAUTION

Do Not Attempt To Use This Device Without Understanding And Following Proper Safety Precautions Regarding System Grounding, Fire Safety, And Special Handling For Potentially Dangerous Additives.

Hammonds Model HC150-1P Injector Cart Manual

Consult your Engineering Department for their specific instructions. Make certain all personnel involved with this system are thoroughly familiar with safe operating practices.

If your system has been purchased "bare," consult your equipment distributor for help in selecting hoses, fittings and other related accessories. Selection of materials

compatibility, location of unit within the system, effect of the unit on the system and injection point of the additive are also factors that should be discussed by factory authorized personnel.

If no factory-authorized distributor is available, consult the factory directly for assistance.

PREPARATION FOR CALIBRATION AND STARTUP

Before Attempting To Start The System Or Make Calibrations, Please Read The Following Information Carefully.

During startup and calibration, you will be bleeding the system of air and checking for possible leaks throughout the system. Provisions should be made for collection or clean-up of spilled fluid. Attempts should be made to minimize losses during these procedures. If the additive being handled is flammable, fire safety precautions should be taken.

A WORD ABOUT ADDITIVES

Most additives being used in fuels today have at least some degree of toxicity. Many are very dangerous. Extreme caution should be taken in handling additives. Remember, the additive is placed under pressure when being injected into the line. Be careful; wear protective clothing including eye protection. Be sure you have facilities to wash off any additive that may

come in contact with your skin. Read all additive manufacturers safety precautions and Material Safety Data Sheets, following them to the letter.

HERE IS WHAT IS NEEDED:

- Appropriate safety protection equipment.
 - Eye protection in the form of safety goggles.
 - A marked graduated glass bottle that is marked in either cc's or ounces. (At least 16 oz.)
 - A stop watch.
 - A means of determining the flow rate of the main system.
 - A small pocket calculator is helpful.
 - A clipboard is helpful with pad of paper.
- AT LEAST ONE AND PREFERABLY TWO HELPERS**

REMEMBER: Any plumbing system varies with temperature and fluid being pumped. The system also changes as parts of the pump wear.

Hammonds Model HC150-1P Injector Cart Manual

CALIBRATION AND STARTUP

IF YOUR INJECTOR SYSTEM IS EQUIPED WITH CALIBRATION GAUGES, FOLLOW THE INSTRUCTIONS FOR THEIR USE IN THE BACK OF THIS MANUAL.

PROPER ADDITIVE INJECTION RATIOS

Although volumetric calibration at atmospheric pressure will bring you within an acceptable range of additive injection, the only true evaluation for proper ratio is the ASTM D-5006 evaluation for fuel system ice inhibitor (FSII). Do not depend on volumetric calibration to ensure on-spec performance because line pressures can vary and additive injector parts wear over time. Contact Hammonds Fuel Additives, Inc. for supply of quality fuel system ice inhibitor and fuel testing procedures.

Please Follow These Steps In Their Given Order. Read Them Over Carefully Before Starting, Then Follow Them To The Letter. If there is Any Part of the Procedure That Is Not Clear, Consult Your Local Distributor or the Factory Directly.

1. Make certain the additive tank is at least $\frac{1}{4}$ full of the proper additive.
2. Open the suction valve between the tank and the pump. This valve should be located at any point between the additive tank and the injector.
3. All systems are calibrated at the factory to customer specified requirements. So if adjustments are required, they should only

be minor. If this is the case, go directly to step 6.

4. If you are starting from scratch in the calibration and adjustment, loosen the stroke adjustment locking screws located on the bottom of the pump body directly under the stroke adjustment knob. This will allow the stroke adjustment to be moved.

5. Adjust the stroke adjustment knobs located on the pump face to approximately 50%. **CAUTION:** Do not turn these adjustments with excessive force. If they are difficult to adjust, simply rotate the main rotor shaft, by producing flow in main product line. Lock the stroke adjustment locking screws down firmly.

6. Set the calibration valve (3-way valve) in the "calibrate or bleed position." This is done by making certain that the handle on the valve is positioned so that additive will exit through the short open tube.

7. Make certain all product connections going to and from the system are in their proper, locked position to ensure safe, leak proof flow of product through the fluid motor. Double check the flow direction arrows located on the fluid motor housing, and check valves before and after the pump to ensure that the system is installed properly.

8. At this point, consider the information you will have to gather during the next few steps of the calibration process.

A. What will the flow rate through the unit be?

Hammonds Model HC150-1P Injector Cart Manual

B. What is the length of time that the calibration will cover?

C. What is the amount of additive in ounces or cc's that you will need to collect based on the duration of the calibration.

You Should Have the Answer To All Of These Questions Before Your First Trial Run.

9. Before starting the main product flow through the system, make certain everyone understands that you will run the system for, let's say, one (1) minute. Even shorter runs are fine, especially if you are running at high flow rates.

10. Place the measured graduate under the calibration tube. Put on your eye protection.

11. At the command of the time keeper, or that person watching the flow meter, start the main product pumps.

12. Give the system a few seconds to gather momentum and flow through the fluid motor. Notice if the additive injector system is turning. The bearing on the shaft under the stroke adjustment knob cover should be spinning.

13. If the pump is being started up for the first time, it will take a few seconds to prime itself and begin discharging fluid from the calibration tube. Is your eye protection on? If not, **PUT IT ON NOW!**

14. As soon as the pump begins discharging a clear, air free stream of fluid from the calibration tube, you are ready to begin your calibration. At this point, the system is primed. ***Hammonds recommends using the Pressure**

Simulating Calibration Devise, an optional accessory item, to duplicate system pressure during calibration.

15. You will now prepare to make your first actual calibration run. Empty your collected additive back into the tank, putting the bottle back under the calibration tube. Notice the setting on the main product meter, set your stop watch at zero.

16. When ready, start the system again. Stop it at the decided time interval or meter reading. Calculate the amount of product that traveled through the system. Measure the amount of additive gathered, and record the amount of elapsed time.

17. It will be at this time that you will have to calculate how much additive you should have collected for the amount of fuel that the system pumped. This, of course, depends upon the ratio that is required. The following example is the easiest way of explaining the procedure without getting too complicated. It is not the only way...use it if you like.

Example condition: Amount of product pumped: 500 gallons

Ratio of additive desired: 250 PPM (Parts per million)

It is assumed that the operator will know how much product is being pumped through the system in a given length of time. If, for example, you have a meter that registers the flow in gallons, you simply record the gallons at the beginning of the timed run, and then again at the end of the run. If you run for one (1) minute, you simply subtract the beginning number on the meter from the number registered after the run. This will give you the gallons per minute (GPM). Having to make this

Hammonds Model HC150-1P Injector Cart Manual

calculation is the only reason for timing the run. You can accomplish the same result by just watching the meter and stopping the system when you have totaled the desired amount of gallons through the system. In any case, you must know the amount of product passing through the system before calibration can begin.

First, change the gallons pumped into ounces by multiplying total gallons (in our example 500) by 128 (128 oz. to a gallon). The answer is 64,000 ounces.

Second, divide by 1,000,000. The answer is .064. Since you are dealing in 1/1,000,000 (one part per million) of the total for your ratio, you must find out what 1/1,000,000 of the 500 gallons is, .064 ounces is 1/1,000,000th (one part per million) of 500 gallons.

Third, multiply the .064 x 250 (for 250 PPM ratio). The answer is 16 ounces.

So, you should collect 16 ounces of additive for every 500 gallons of fuel pumped.

These are all large, round numbers. You may, for example, only be running at 100 GPM, not 500. Use the same procedure; just change the numbers to fit your application.

No two systems will ever perform exactly the same. For this reason, the procedures given for calibration are general in nature. Obviously, it is impossible to provide a graph or table that would be absolutely accurate in every case. With that in mind, all tables and graphs should be used as general guidelines. Remember, the calculated, timed and measured output that

you gather is absolute. Trust your figures and your calculations.

NORMAL OPERATION

Following initial start up and calibration, the system requires very little attention other than making certain that additive tank levels are maintained. Operators will quickly become accustomed to the performance of the system by observing the Calibration Gauge glass or Sight Flow Indicator. On-spec injection will cause a certain response in the indicators, and with some practice, operators will be able to observe the system at a glance. *This does not mean that system calibration should not be periodically checked!* However, during a busy workload, these visual checks will provide assurance to the operator that the system is functioning.

Assuming the system remains set up and operating at least intermittently, calibration is required perhaps every 1 – 3 months. Good record keeping of additive inventory and use levels compared to fuel handled can give a good indication that additive is on specification. Test such as the refractometer for FSII content should be the final test to verify additive injection ratios.

Hammonds Model HC150-1P Injector Cart Manual

SAMPLE ADDITIVE CHART

GALLONS	135 PPM	270 PPM	1000 PPM
100	1.7 OZ.	3.4 OZ.	12.8 OZ.
200	3.4 OZ.	6.9 OZ.	25.6 OZ.
400	6.9 OZ.	13.8 OZ.	51.2 OZ.
500	8.6 OZ.	17.2 OZ.	64.0 OZ.
700	12.0 OZ.	24.0 OZ.	89.6 OZ.
1000	17.2 OZ.	34.5 OZ.	128.0 OZ.

TROUBLESHOOTING THE SYSTEM

The following conditions are given as a means of troubleshooting the system. Each condition lists a number of possible causes. In most cases, trouble can be solved by the use of this section. Please read it carefully before attempting repairs or making changes in the system.

FLUID MOTOR IS NOT TURNING

- A.** Insufficient flow to turn the motor. A minimum flow of about 7 GPM is needed to start the system.
- B.** A rag or some other object is jammed in the line preventing the fluid motor from turning.
- C.** A diverter valve is blocked downstream of the system, blocking the fuel flow through the system.
- D.** A valve is closed upstream of the fluid motor starving the product flow.
- E.** If the unit has been recently serviced internally, or it is new, the rotor might be installed backwards. Consult the factory before disassembly.

INJECTOR IS TURNING AND PUMP IS RUNNING, BUT WITH NO OUTPUT

- A.** Pump is air-locked. In some cases where there is a very long line running from the injector head and the point of injection into the system, there is sufficient air volume to cause the pump to act as a compressor. It is not able to open the valves throughout the system and therefore, cannot pull a suction of fluid to the pump. Loosen the connection at the injection point check valve and allow it to remain open until the pump begins pumping. This is rare, but can happen in some cases of unusual installations.
- B.** One or more of the suction or discharge check valves are not working. While the pump is running, tap on the side of the valves, one at a time. This will generally jar them loose. The poppet/seal is very small, and will sometimes become stuck. After the valve is loosened and has a supply of fluid, usually it will not stick again.
- C.** The pump is not getting additive. Check that the valve between the pump and the tank is open. Check all connections in the line between the pump and the tank.

Hammonds Model HC150-1P Injector Cart Manual

D. The vent on the tank is not open causing the pump to pull a vacuum. Open the vent. Check to see if the cap has been removed from the dryer cartridge, if so equipped.

E. The pump stroke is set at zero. Check to see if the locking screws have been left loose, allowing the adjustment knobs to rotate to zero percent (0%) of stroke.

F. The additive tank is empty...don't laugh, it happens.

THE INJECTOR IS OPERATING BUT WITH REDUCED OUTPUT

A. Leaking suction line or trash in one of the pump check valves.

B. Air leak in suction side of system.

C. Defective tubing or piping on suction side.

D. Leaks in threaded connections - suction side.

E. Injector diaphragm may be pulled out in back causing injector to pump in forward portion of stroke only. This will not create a visible leak but will reduce output by 50%. It usually happens after many hours of operation.

F. If equipped with a plunger pump, the plunger seal (o-ring) may be worn and needs replacing. Also, check plunger for signs of wear, replace if necessary.

G. Fluid motor vanes are badly worn. This would only be probable after a very high number of hours of operation.

PREVENTIVE MAINTENANCE

1. Make certain to use only clean, fresh additive that has been stored in a sealed container. Most additives are moisture sensitive. Some will form heavy crystals if allowed to accumulate moisture. These crystals will stop the pump in very short order, if not cause calibration to be changed due to clogging of the valves and other parts.

2. Check the additive filter screen at least every six months. More often if there is an indication of possible contamination.

3. Check the system for leaks at every use. This is an extremely important safety procedure, since some additives are flammable, caustic and corrosive.

4. Check for leaks from the seal that is located at the exit point of the injector output shaft in the side plate housing. This

should be done at each operation. Leakage at this point usually indicates that the mechanical seal inside the rotor housing is leaking. A leak here will be fuel, and is not only dangerous from a fire standpoint, but will quickly ruin the bearings on the rotor shaft, since all lubricant will be washed away.

5. Check the fittings for leakage around the Calibration Gauge or Sight Flow Indicator, if one is used on the pump. Check this fitting each time the filter is changed or cleaned. Make certain there are no leaks in the suction line. A very small leak will either change the operation of the pump or prevent it from operating altogether.

6. Visually check around the pump head and make certain there is no leaking of additive around the fluid ends. If there is, check the tightness of the head bolts. (40 inch pounds each).

Hammonds Model HC150-1P Injector Cart Manual

7. Check the grease around the eccentric drive bearing in the pump every 6 months. Use a good quality white lithium spray lubricant.

8. It is recommended that the injector diaphragm or plunger o-ring be changed at least every 12 months. Every 6 months under extreme operating conditions. Doing so will prevent unexpected failures and unscheduled downtime.

Hammonds injectors are very dependable. If installed properly and sized appropriately to the application, they require very little maintenance. With the exception of the grease on the eccentric bearing mentioned in STEP 7, there is very little

actual maintenance to do. Remember; keep the additive clean, and the suction filter clean. If you have problems with the pump working, it is usually in the suction side of the system (between the injection pump and the additive tank). Suction lines and fittings are notorious for leaking just enough to prevent the system from working. Always check to ensure optimum suction conditions should problems occur.

Remember, a leak in the suction allows air from the outside to be introduced into the system. It does not always mean a visible leak of additive. If the pump loses its prime or output is erratic, chances are good that there are problems in the suction side. Otherwise, if it is working...leave it alone!!!!

PREVENTATIVE MAINTENANCE SCHEDULE

NOTE: It is important to read the previous pages on preventative maintenance. These intervals are general, and may vary according to individual applications and severity of service.

SERVICE FUNCTION	0-4 HRS DAILY	5-8 HRS DAILY	8+HRS DAILY
Check additive filter screen	Monthly	Monthly	Monthly
Check system for additive/fuel leaks	Daily	Daily	Daily
Inspect diaphragms/plunger seals	12 Months	6 Months	3 Months
Replace diaphragms/plunger seals	12 Months	As needed	As needed
Check eccentric bearing grease	6 Months	3 Months	Monthly
Check stroke adjustment parts for looseness	Monthly	Monthly	Monthly
Replace stroke adjustment parts	24 Months	As needed	As needed
Disassemble and inspect turbine housing and internal parts	24 Months	12 Months	8 Months
Grease bearings	12 Months	6 Months	3 Months

Hammonds Model HC150-1P Injector Cart Manual

DESICCANT DRYER

Your Hammonds Additive Injector Cart includes 1 or more additive tanks. These tanks may come equipped with a desiccant dryer cartridge. These dryers come in several different sizes.

Most systems are equipped with the standard 3/4" cartridge. This unit is attached to the tank via a short length of black rubber hose. The cartridge has a housing constructed of a clear poly material and is filled with a blue colored desiccant crystal. All these units are shipped from the factory with a small yellow cap on the each end of the cartridge.

Some systems may come equipped with a large canister measuring approximately 2" diameter and 10" in length. These units perform the same function, just on a larger scale. Due to their greater capacity, they last longer between service. These units are sealed from the factory by a small, plastic plug which is located either on the bottom or one side of the canister.

The purpose of all desiccant dryers is simply to remove moisture from the air as the system breathes. All tanks or portable sources of additive supply must be vented to atmosphere in order for the injector to operate. If moisture in this venting air is not removed, some additives are either ruined or seriously damaged. Fuel system icing inhibitor (FSII), for example, is designed to seek out water in a fluid. So, when enough moisture is absorbed into the container, the FSII is diluted and at some point will be ruined. Biobor® JF, an anti-fungal material, will form crystals in the presence of moisture and not only perform

unsatisfactorily as an additive, but will stop up pumps and lines as well.

The following instructions apply to all desiccant cartridges:

A. Remove the caps or plugs when the system is placed into service.

B. Observe the color of the desiccant. The original color is blue. As moisture is absorbed, the color will change to pink. When the cartridge is completely pink, it should either have its contents removed, dried and replaced, or the entire unit replaced.


C. NOTE: The contents can be removed from plastic container, placed on a pan and baked at 400°F in a conventional oven until the moisture has been removed. When the color blue returns, the cooled material may be reinstalled into plastic containers and is again ready for service.

D. Color change and cartridge life is totally dependent on humidity. The more moist the air, the shorter the life. Keeping it dry is especially important if additive is not consumed rapidly. Check daily and service as needed.


Hammonds Model HC150-1P Injector Cart Manual

Page intentionally left blank.


Hammonds Model HC150-1P Injector Cart Manual

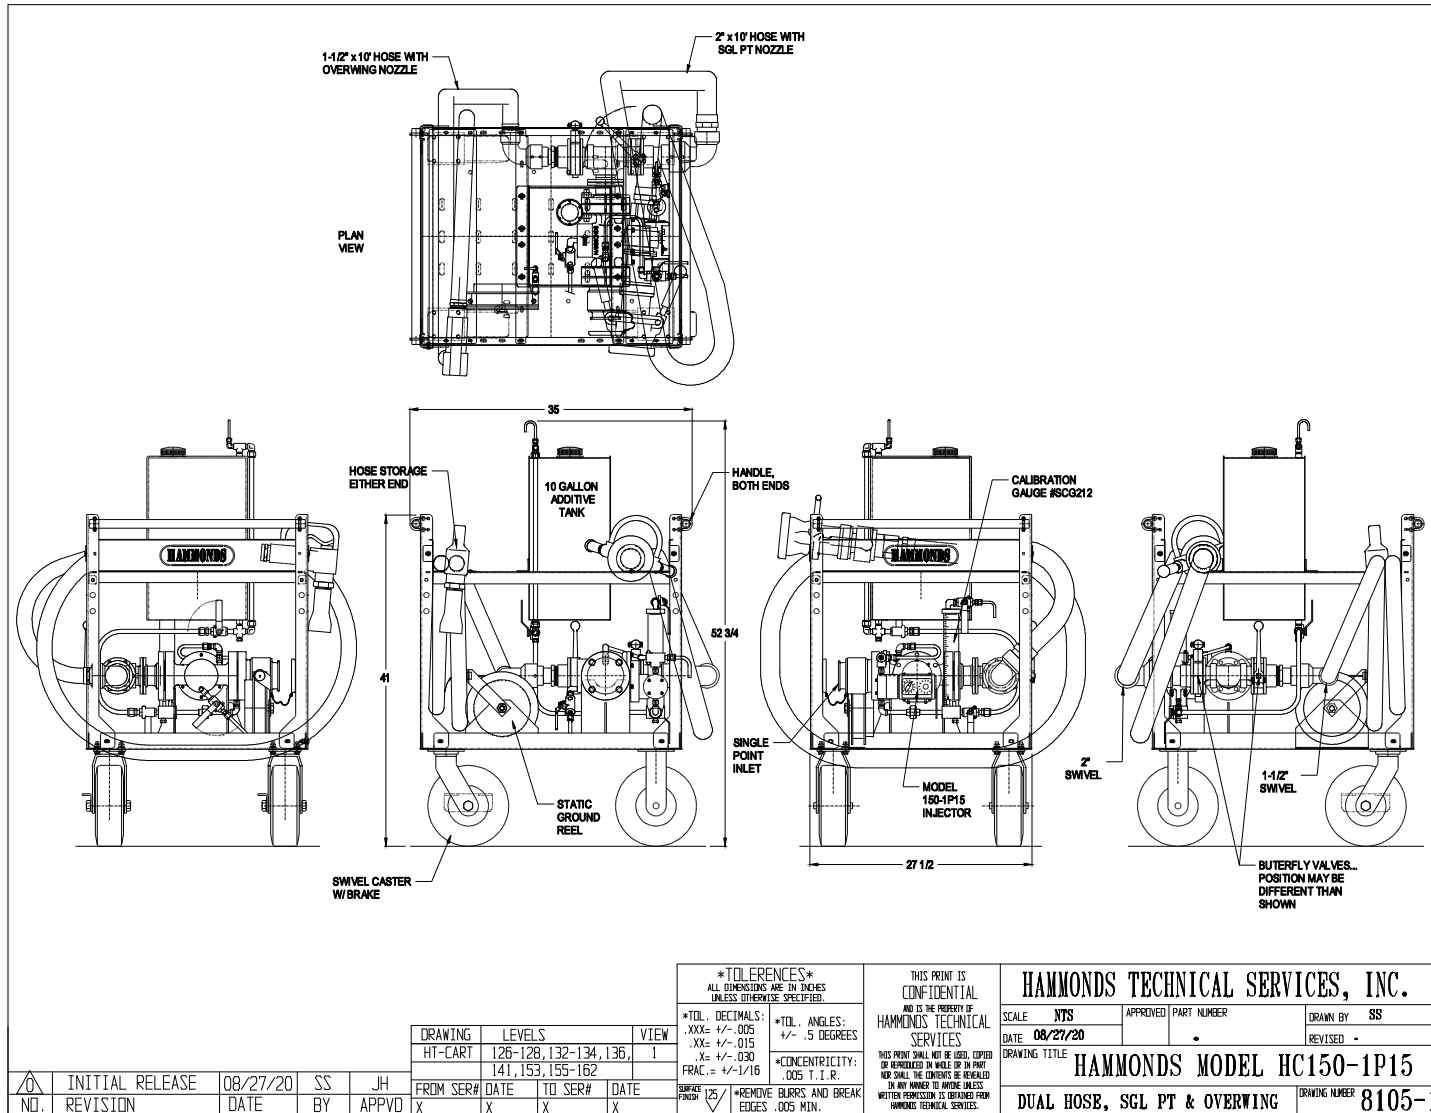

Hammonds Model HC150-1P Injector Cart Manual

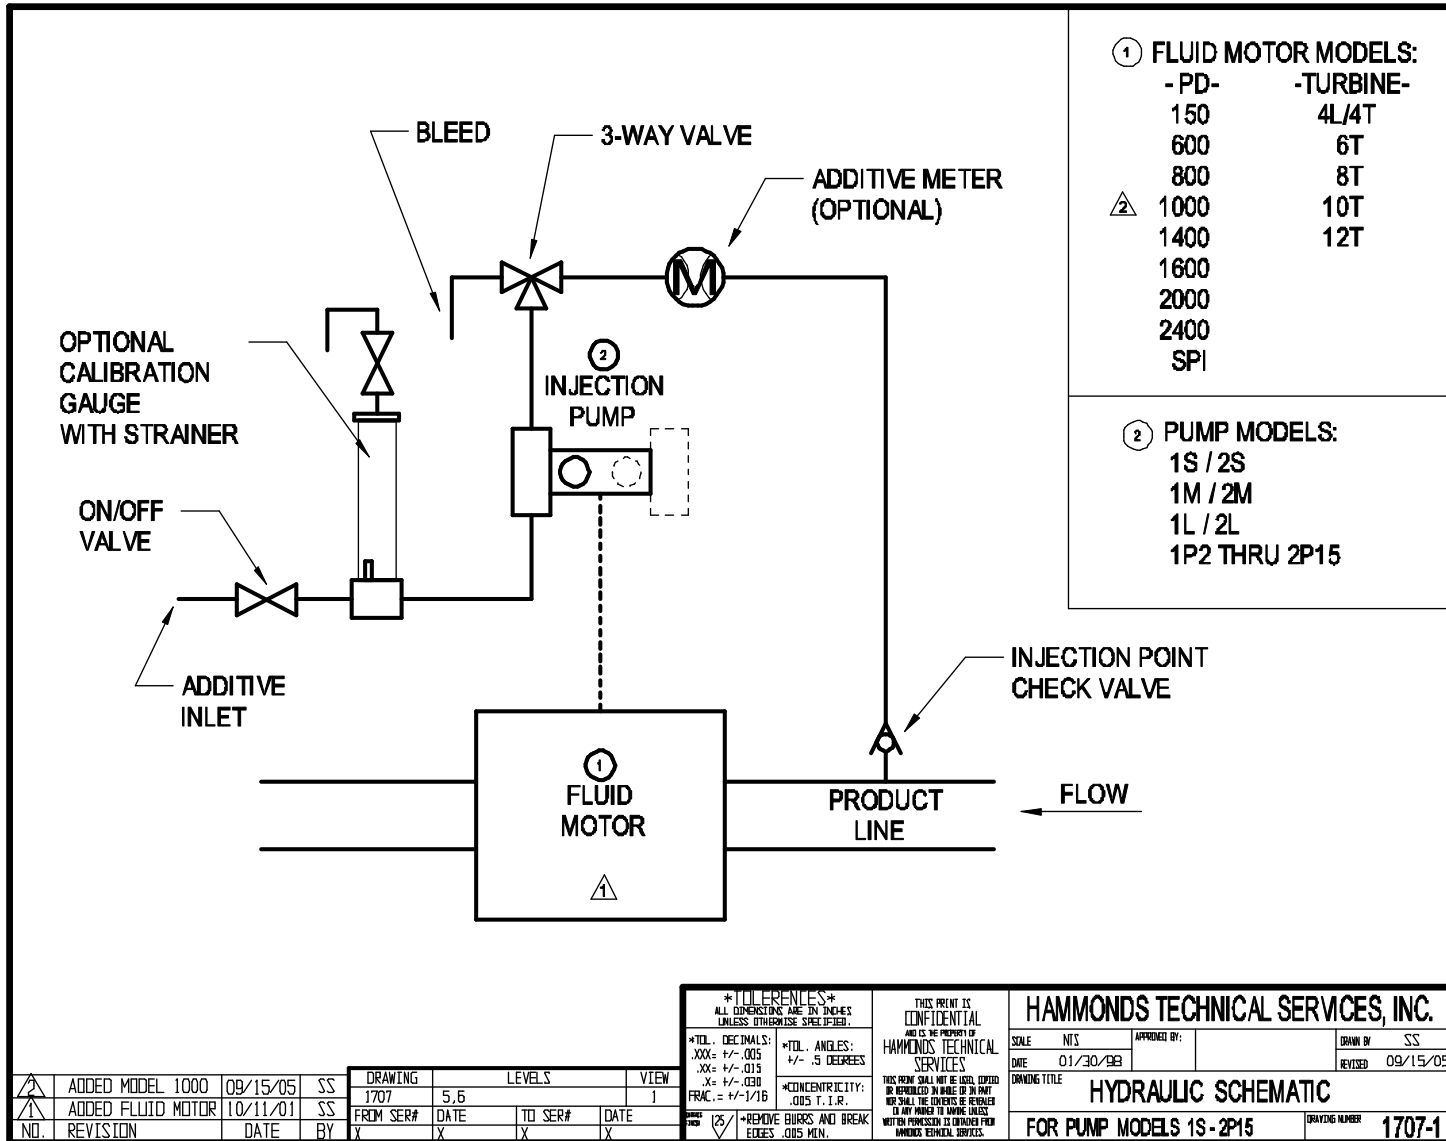

Hammonds Model HC150-1P Injector Cart Manual

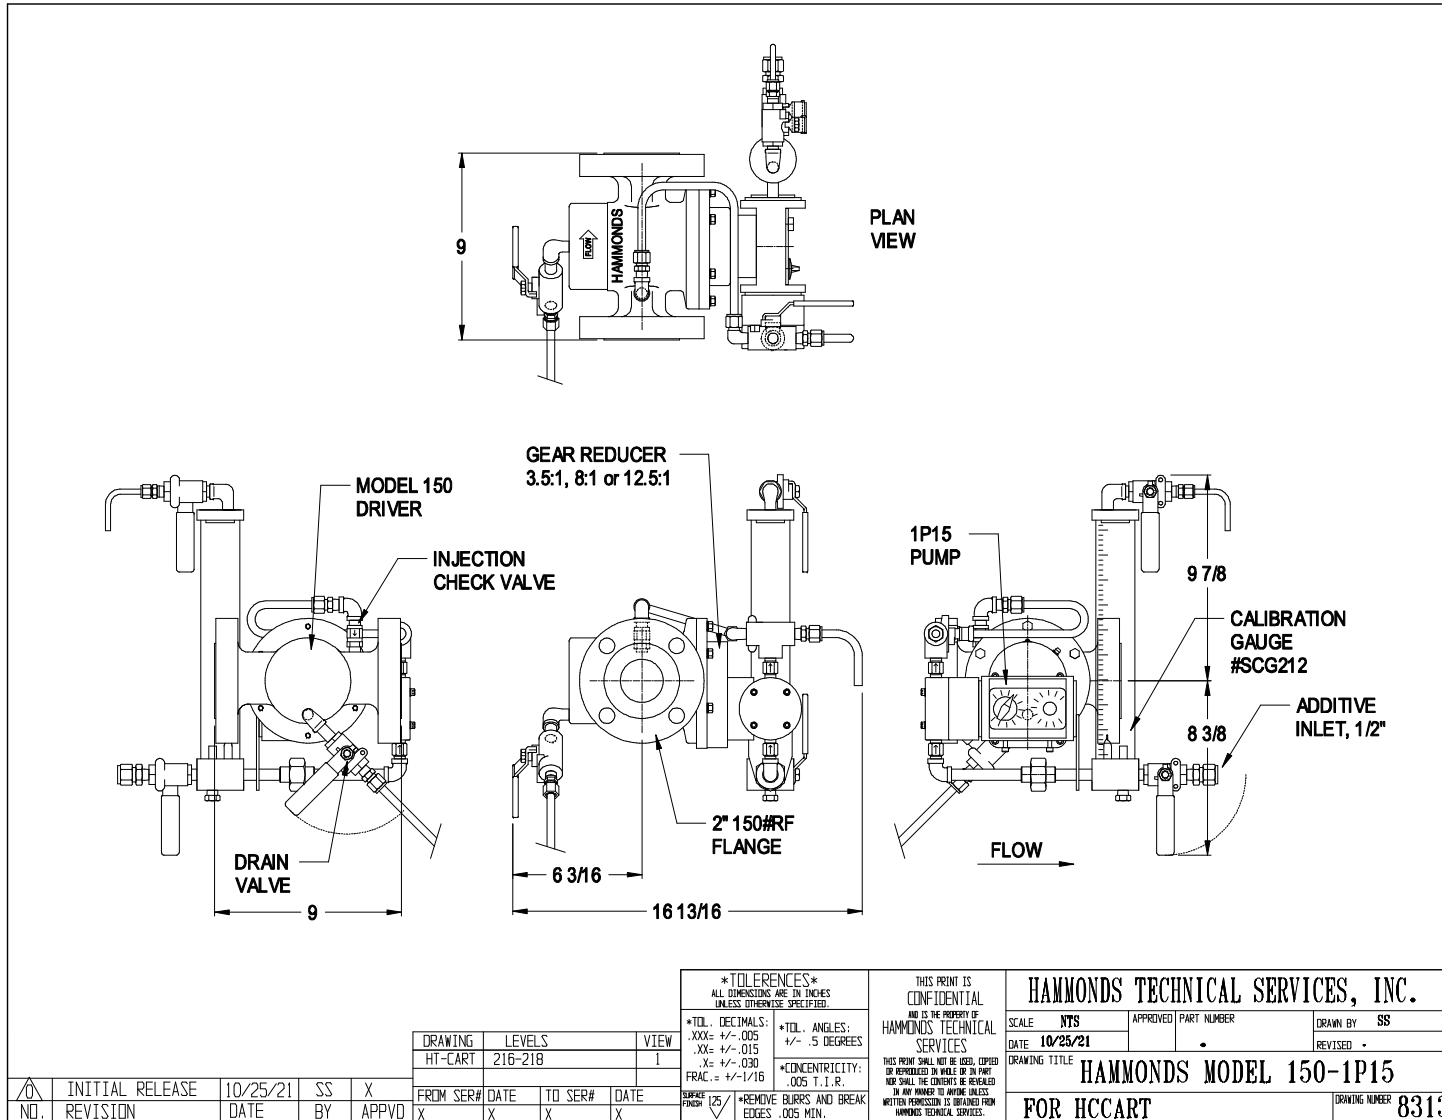

Hammonds Model HC150-1P Injector Cart Manual


ITEM	PART NO.	QTY.	DESCRIPTION
1	151005	2	HEX PLUG, 1/4" NPT
2	150012	2	WEAR RING
3	150229-1	1	SHAFT
4	150086	1	ROTOR
5	150231	1	HOUSING, 1 1/2" 150# RF FLANGED
6	150232	1	HOUSING, 1 1/2" VICTAULIC
7	150287A	1	HOUSING, 2" 150# RF FLANGED
8	150229-01	1	KEY, 1/8" SQ. x 1"
9	881009-150	1	MECH. SEAL, VITON (STD.)
10	141050-150	1	MECH. SEAL, BUNA-N (OPT)
11	150230	1	COMBO END PLATE
12	881058	6	LOCK WASHER, 1/4
13	101018	6	HEX BOLT, 1/4-20x1 1/4
14	150288	2	ROLL PIN, 1/16 x 7/16
15	881080	3	SNAP RING
16	150070-1	1	18T PINION (8:1)
17	881522	1	GREASE VENT
18	881521	1	GREASE FITTING
19	150072	1	GEAR CASE
20	101045	1	SNAP RING
21	150011	1	OUTPUT SHAFT
22	881157	1	H.D. DRIVE BEARING
23	881630	1	SPACER
24	881120	2	BEARING
25	881024	1	OIL SEAL
26	881119	2	SNAP RING
27	881545	4	SCREW, 10-32x1 1/4
28	101038	4	LOCK WASHER, #10 HC
29	150-144T	1	144T GEAR ASSY (8:1) W/ #27, 28
30	150075	1	COLLAR
31	103416	1	O-RING, VITON (STD.)
32	103395	1	O-RING, BUNA-N (OPT)
33	255051	2	SCREW, FH-6-32x1/2
34	881063	2	BEARING
35	150127	6	VANE, TEFLON
36	885125	1	SPACER (OPTIONAL) / 5
37	863025	1	SET SCREW, 1/4-20 x 1/4"
* OPTIONAL RATIO:			
38	150073	1	12T PINION (12.5:1)
39	150-150T	1	150T GEAR ASSY (12.5:1) W/ #27, 28

△ WAS 1/8" ROLL PIN	09/14/15	SS	X
△ ADDED PART NO.	02/03/15	SS	X
△ ADDED OPTIONAL	01/29/15	SS	X
△ ADDED 2" RF PN	01/15/14	SS	X
△ NEW SEAL PN	11/11/13	SS	X
△ ADDED SHIM SPACER	09/11/13	SS	X
△ NEW ASSY. NO.	04/12/12	SS	X
△ INITIAL RELEASE	07/21/04	SS	X
NO. REVISION	DATE	BY	APPVD

TOLERANCES ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.			
*TOL. DECIMALS: .XXX± ±/- .005 .XX± ±/- .015 .X± ±/- .030 FRAC. ± ±/- 1/16	*TOL. ANGLES: ±/- .5 DEGREES ±/- .005 I.L.R.	THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES. THIS PRINT SHALL NOT BE LOANED, COPIED OR REPRODUCED IN WHOLE OR IN PART NOR SHALL THE CONTENTS BE REVEALED TO ANY NUMBER TO WHOMEVER WITHOUT PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.	
DRAWING NO. 1544 LEVELS 6, 25-28 VIEW 1		SCALE NTS DATE 07/21/04 DRAWING TITLE MODEL 150 DRIVER W/REDUCER *GEAR RATIO 8:1 (OPTIONAL 12.5:1)	
FROM SER# DATE TO SER# DATE X X X X		APPROVED PART NUMBER DRAWN BY SS REVISED 09/14/15 DRAWING NUMBER 4910	

HOUSING SHOWN WITH 150# RF FLANGES
...VICTAULIC CONNECTIONS AVAILABLE

Hammonds Model HC150-1P Injector Cart Manual

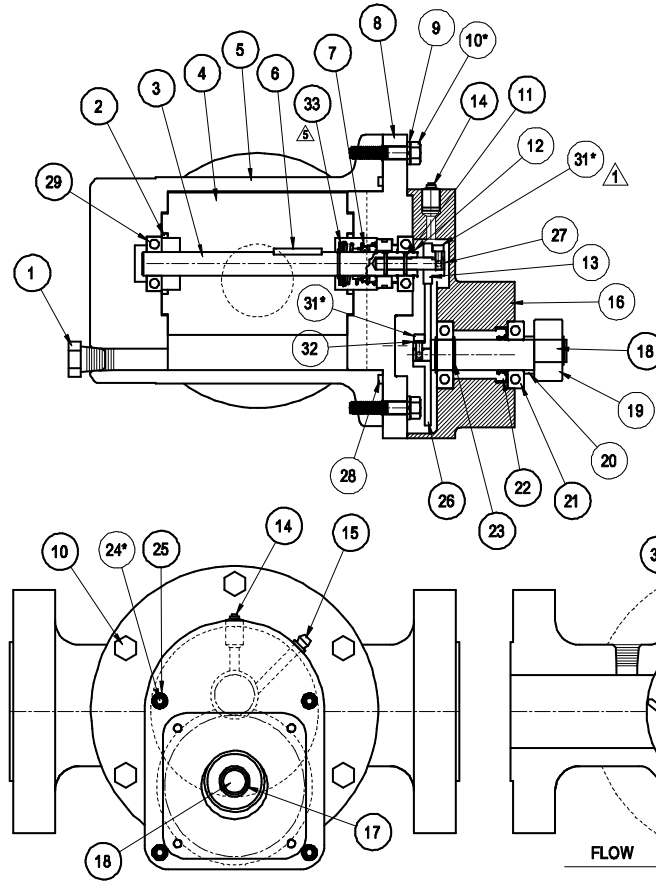

ITEM	PART NO.	QTY.	DESCRIPTION
1	151005	2	HEX PLUG, 1/4" NPT
2	150012	2	WEAR RING
3	150229-1	1	SHAFT
4	150086	1	ROTOR
5	150231	1	HSG, 1 1/2" RF FLNGD
	150232	1	HOUSING, 1 1/2" VICTAULIC
6	150267A	1	HOUSING, 2" 150# RF FLNGD
7	150229-01	1	KEY, 1/8" SQ. x 1"
8	881009-150	1	MECH. SEAL, VITON (STD)
9	141050-150	1	MECH. SEAL, BUNA-N (OPT)
10	150230	1	COMBO END PLATE
11	881058	6	LOCK WASHER, 1/4
12	101018	6	HEX BOLT, 1/4-20X1 1/4
13	150288	2	ROLL PIN, 1/16 x 7/16
14	881080	3	SNAP RING
15	150263	1	40T SPUR GEAR (3.5:1)
16	881522	1	GREASE VENT
17	881521	1	GREASE FITTING
18	150280	1	GEAR CASE
19	101045	1	SNAP RING
20	150259	1	OUTPUT SHAFT
21	881157	1	H.D. DRIVE BEARING
22	881630	1	SPACER
23	881120	2	BEARING
24	881024	1	OIL SEAL
25	881119	2	SNAP RING
26	881545	4	SCREW, 10-32 x 1 1/4
27	101038	4	LOCK WASHER, #10 HC
28	150264	1	140T GEAR (3.5:1)
29	150258-1	1	SHAFT INSERT
30	103416	1	O-RING, VITON (STD)
31	103395	1	O-RING, BUNA-N (OPT)
32	881063	2	BEARING
33	150127	6	VANE, TEFLON
	101010	2	SCREW, #6-32 x 3/8
	881086	1	LOCK WASHER, #6 HC
	885125	1	SPACER (OPTIONAL)

* BOLT TORQUE SPECIFICATIONS	
Ref. No.	Assembly Torque
10	10 ft. lbs
24	46 in. lbs.
31	34 in. lbs.

HOUSING SHOWN WITH 150# RF FLANGES
....VICTAULIC CONNECTIONS AVAILABLE

△	WAS 1/8" ROLL PIN	05/23/16	SS	X
△	ADDED OPTIONAL	01/29/15	SS	X
△	ADDED 2" RF PN	01/15/14	SS	X
△	NEW SEAL PN	11/11/13	SS	X
△	ADDED SHIM SPACER	11/11/13	SS	X
△	REMV D. LW	11/04/08	SS	X
NO.	REVISION	DATE	BY	APPVD

DRAWING	LEVELS	VIEW	
1544	72, 84, 86, 87	1	
FROM SER#	DATE	TO SER#	DATE
X	X	X	X

TOLERANCES
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.

*TOL. DECIMALS:
XXX+ +/- .005
.XX+ +/- .015
.X+ +/- .030
FRAC. = +/- 1/16

*TOL. ANGLES:
+/- .5 DEGREES

*CONCENTRICITY:
.005 T. I. R.

SURFACE FINISH: 125
*REMOVE BURRS AND BREAK EDGES .005 MIN.

THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES

THIS PRINT SHALL NOT BE USED, COPIED OR REPRODUCED IN WHOLE OR IN PART AND SHALL BE RETURNED TO THE ORIGINAL SOURCE.

HAMMONDS TECHNICAL SERVICES, INC.

SCALE: **NTS** APPROVED: _____ PART NUMBER: _____ DRAWN BY: **SS**

DATE: **02/11/08** REVISED: **05/23/18**

DRAWING TITLE: **MODEL 150 DRIVER W/REDUCER**

GEAR RATIO **3.5:1** DRAWING NUMBER: **5790**

Hammonds Model HC150-1P Injector Cart Manual

ITEM	PART NO.	QTY.	DESCRIPTION
1	101014	1	POWER FRAME
2	102266	1	PLUNGER, P2
3	102267	1	FLUID END, P2
4	882949	8	LOCK WASHER, #10 INT. TOOTH
5	881780	4	SCREW, 10-32 x 2 3/4"
6	101842	1	CROSSHEAD GUIDE
7	101007	2	RETURN SPRING
8	101006	1	CROSSHEAD
9	101152	2	SLIDE BEARING
10	101005	1	STROKE ADJUSTMENT CAM
11	101003	1	CAM GUIDE
12	101001	1	STROKE ADJUSTMENT KNOB
13	101002	1	POWER FRAME COVER
14	101004	1	LOCK SCREW
15	101009	4	SCREW, 8-32 x 3/8"
16	881086	4	LOCKWASHER, #6
17	101010	4	SCREW, 6-32 x 3/8"
18	881089	4	SCREW, 10-32 x 3/4"
18A	881660	4	SCREW, 10-32 x 2 1/4" (OPTION)
19	102783	2	CHECK VALVE, 1/8", VITON
20	102269	1	O-RING, AFLAS
20A	102270	1	O-RING, VITON (OPTION)
21	102268	1	SEAL HOUSING, P2
22	881024	1	SEAL, LIP
23	881045	1	SETScrew, 1/4-20 x 1"
24	882911	1	CHECK VALVE, 5 PSI, AFLAS
25	101576	1	CHECK VALVE, 5 PSI, VITON (OPTION)
25	101058	1	1/4 x 1/4 FNPT TUBE ADAPT.


DRAWING		LEVELS	
WAS #102463	02/20/08	SS	X
WAS #101933	03/15/04	SS	X
NO. REVISION	DATE	BY	APPVD

FROM SER#	DATE	TO SER#	DATE
X	X	X	X

TOLERANCES ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED. *TOL. DECIMALS: .XX± ±.005 .XX± ±.015 .X± ±.030 FRAC. ± ±1/16 *TOL. ANGLES: 1/2° ± .5 DEGREES *CONCENTRICITY: .005 T.I.R.		THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES THIS PRINT SHALL NOT BE LOANED, COPIED OR REPRODUCED IN WHOLE OR IN PART NOR SHALL THE CONTENTS BE REVEALED IN ANY MANNER TO ANYONE UNLESS WRITTEN PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.	
---	--	--	--

HAMMONDS TECHNICAL SERVICES, INC.			
SCALE: NTS	APPROVED/ PART NUMBER	DRAWN BY: SS	
DATE: 06/20/95		REVISED: 02/20/08	
DRAWING TITLE: HAMMONDS 1P2 PUMP		DRAWING NUMBER: 4567	

Hammonds Model HC150-1P Injector Cart Manual

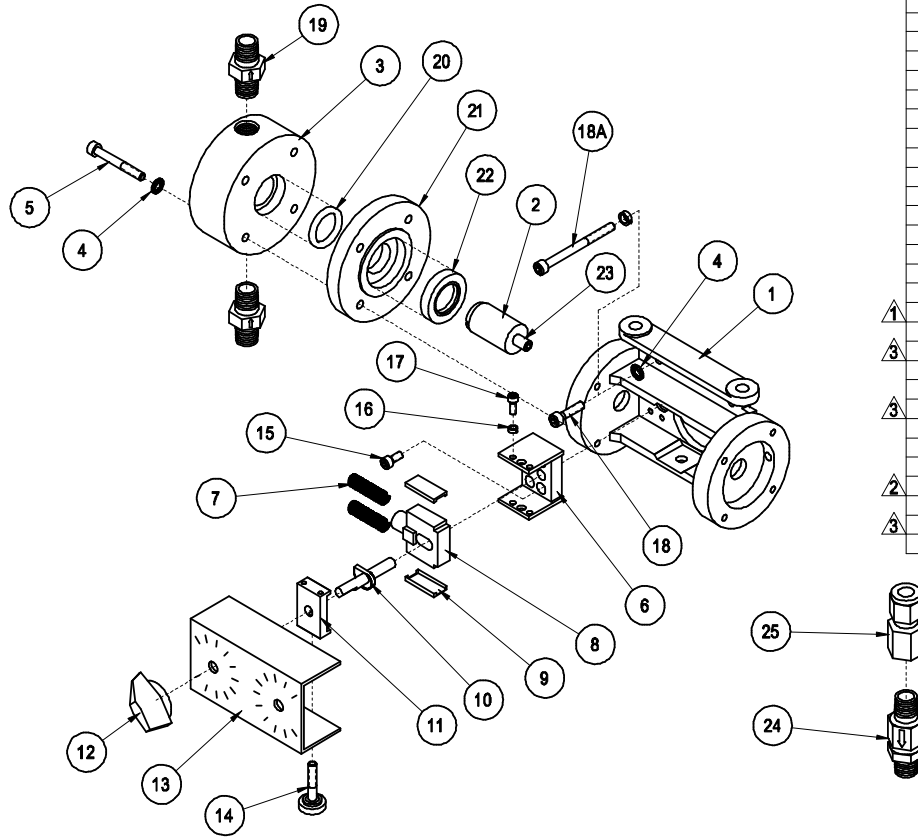

ITEM	PART NO.	QTY.	DESCRIPTION
1	101014	1	POWER FRAME
2	102339	1	PLUNGER, P5
3	102340	1	FLUID END, P5
4	882949	8	LOCK WASHER, #10 INT. TOOTH
5	881317	4	SCREW, 10-32 x 2"
6	101842	1	CROSSHEAD GUIDE
7	101007	2	RETURN SPRING
8	101006	1	CROSSHEAD
9	101152	2	SLIDE BEARING
10	101005	1	STROKE ADJUSTMENT CAM
11	101003	1	CAM GUIDE
12	101001	1	STROKE ADJUSTMENT KNOB
13	101002	1	POWER FRAME COVER
14	101004	1	LOCK SCREW
15	101009	4	SCREW, 8-32 x 3/8"
16	881086	4	LOCKWASHER, #6
17	101010	4	SCREW, 6-32 x 3/8"
18	881089	4	SCREW, 10-32 x 3/4"
18A	881660	4	SCREW, 10-32 x 2 1/4" (OPTION)
▲	19	102463	2 CHECK VALVE, AFLAS, STD.
▲		102464	2 CHECK VALVE, VITON (OPTION)
▲		102642	2 CHECK VALVE, KALREZ (OPTION)
20	101856	1	O-RING, AFLAS
	101857	1	O-RING, VITON (OPTION)
▲		103514	1 O-RING, KALREZ (OPTION)
21	102341	1	SEAL HOUSING, P5
22	881079	1	SEAL, LIP
▲	23	881045	1 SETSCREW, 1/4-20 x 1" (PART OF #2)
▲	24	882911	1 CHECK VALVE, 5 PSI, AFLAS
		101576	1 CHECK VALVE, 5 PSI, VITON (OPT)
▲		102643	1 CHECK VALVE, 5 PSI, KALREZ (OPT)
25	101088	1	3/8 x 1/4 FNPT TUBE ADAPT.

▲	ADDED KALREZ OPT	06/25/09	SS		DRAWING	LEVELS
▲	WAS #101671	03/15/04	SS		INJECTOR	10, 12, 14, 16, 18, 20, 24, 28, 30
▲	WAS #101933	03/15/04	SS			39-41, 89-93, 95-97, 99, 118, 119
NO.	REVISION	DATE	BY	APVD	FROM SER#	DATE TO SER# DATE
				X	X	X X

TOLERANCES
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.

*TOL. DECIMALS:
.XXX± +/- .005
.XX± +/- .015
.X± +/- .030
FRAC. ± +/- 1/16

*TOL. ANGLES:
+/- .5 DEGREES

*CONCENTRICITY:
.005 I.J.R.

SURFACE FINISH: 125
REMOVE BURRS AND BREAK EDGES .005 MIN.

THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES

THIS PRINT SHALL NOT BE USED, COPIED OR REPRODUCED IN WHOLE OR IN PART IN ANY MANNER TO INFRINGE UNLESS WRITTEN PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.

HAMMONDS TECHNICAL SERVICES, INC.

SCALE: NTS	APPROVED: PART NUMBER	DRAWN BY: SS
DATE: 10/07/99		REVISED: 08/25/09
DRAWING TITLE: HAMMONDS 1P5 PUMP		
		DRAWING NUMBER: 3836

Hammonds Model HC150-1P Injector Cart Manual

ITEM	PART NO.	QTY.	DESCRIPTION
1	101014	1	POWER FRAME
2	102137	1	PLUNGER, P6
3	102138	1	FLUID END, P6
4	882949	8	LOCK WASHER, #10 INT. TOOTH
5	881317	4	SCREW, 10-32 x 2"
6	101842	1	CROSSHEAD GUIDE
7	101007	2	RETURN SPRING
8	101008	1	CROSSHEAD
9	101152	2	SLIDE BEARING
10	101005	1	STROKE ADJUSTMENT CAM
11	101003	1	CAM GUIDE
12	101001	1	STROKE ADJUSTMENT KNOB
13	101002	1	POWER FRAME COVER
14	101004	1	LOCK SCREW
15	101009	4	SCREW, 8-32 x 3/8"
16	881086	4	LOCKWASHER, #8
17	101010	4	SCREW, 6-32 x 3/8"
18	881089	4	SCREW, 10-32 x 3/4"
18A	881860	4	SCREW, 10-32 x 2 1/4" (OPTION)
19	102463	2	CHECK VALVE, AFLAS, STD.
	102464	2	CHECK VALVE, VITON (OPT)
	102842	2	CHECK VALVE, KALREZ (OPT)
20	101491	1	O-RING, AFLAS
*	101417	1	O-RING, VITON (OPTION)
3	103544	1	O-RING, KALREZ (OPTION)
21	102139	1	SEAL HOUSING
22	881024	1	SEAL, LIP
23	881045	1	SETScrew, 1/4-20 x 1"
24	882911	1	CHECK VALVE, 5 PSI, AFLAS, STD.
	101576	1	CHECK VALVE, 5 PSI, VITON, (OPT)
3	102843	1	CHECK VALVE, 5 PSI, KALREZ, (OPT)
25	101088	1	3/8 x 1/4 FNPT TUBE ADAPT.

NO.	REVISION	DATE	BY	DESCRIPTION
1		07/13/21	SS	KALREZ OPTION
2		03/15/04	SS	NEW CHECK VALVES
3		09/03/02	SS	WAS #102263
4				

TOLERANCES		*TOL. ANGLES*		*CONCENTRICITY*	
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.		±.5 DEGREES		.005 I.I.R.	
.XXe ±.005		±.5 DEGREES		.005 I.I.R.	
.XXe ±.015		±.5 DEGREES		.005 I.I.R.	
.X ±.030		±.5 DEGREES		.005 I.I.R.	

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES				.005 I.I.R.			
.X ±.030				±.5 DEGREES				.005 I.I.R.			

TOLERANCES				*TOL. ANGLES*				*CONCENTRICITY*			
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				±.5 DEGREES				.005 I.I.R.			
.XXe ±.005				±.5 DEGREES				.005 I.I.R.			
.XXe ±.015				±.5 DEGREES							

Hammonds Model HC150-1P Injector Cart Manual

ITEM	PART NO.	QTY.	DESCRIPTION
1	101014	1	POWER FRAME
2	102192	1	PLUNGER, P7
3	102193	1	FLUID END, P7
4	882949	8	LOCK WASHER, #10 INT. TOOTH
5	881317	4	SCREW, 10-32 x 2"
6	101842	1	CROSSHEAD GUIDE
7	101007	2	RETURN SPRING
8	101006	1	CROSSHEAD
9	101152	2	SLIDE BEARING
10	101005	1	STROKE ADJUSTMENT CAM
11	101003	1	CAM GUIDE
12	101001	1	STROKE ADJUSTMENT KNOB
13	101002	1	POWER FRAME COVER
14	101004	1	LOCK SCREW
15	101009	4	SCREW, 8-32 x 3/8"
16	881086	4	LOCKWASHER, #6
17	101010	4	SCREW, 6-32 x 3/8"
18	881089	4	SCREW, 10-32 x 3/4"
18A	881860	4	SCREW, 10-32 x 2 1/4" (OPTION)
19	102463	2	CHECK VALVE, AFLAS
	102464	2	CHECK VALVE, VITON (OPTION)
20	101490	1	O-RING, AFLAS
	101226	1	O-RING, VITON (OPTION)
	101754	1	O-RING, KALREZ (OPTION)
21	102194	1	SEAL HOUSING
22	881765	1	SEAL, LIP
23	881045	1	SETScrew, 1/4-20 x 1"
24	882911	1	CHECK VALVE, 5 PSI, AFLAS, STD.
	101576	1	CHECK VALVE, 5 PSI, VITON, (OPT)
	102843	1	CHECK VALVE, 5 PSI, KALREZ, (OPT)
25	101088	1	3/8 x 1/4 FNPT TUBE ADAPT.

ADDED PART NOS.	01/21/14	SS			
WAS #101671	03/15/04	SS			
WAS #101933	03/15/04	SS			
WAS #102263	09/03/02	SS			
WAS #101008	08/99	SS			
ADDED INJ CHK VLV	01/06/98	SS			
NO. REVISION	DATE	BY			

TOLERANCES		THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES	
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.		SCALE: MTS APPROVED PART NUMBER: _____ DRAWN BY: SS	
*TOL. DECIMALS:	*TOL. ANGLES:	DATE: 05/11/98	REVISIED: 01/21/14
.XX= +/- .005	+/- .5 DEGREES	DRAWING TITLE: HAMMONDS 1P7 PUMP ASSEMBLY	
.XX= +/- .015			
.X= +/- .030	*CONCENTRICITY:		
FRAC. = +/- 1/16	.005 T.I.R.	DRAWING NUMBER: 1911	
REMOVE BURRS AND BREAK EDGES .005 MIN.		THIS PRINT SHALL NOT BE USED, COPIED OR REPRODUCED IN WHOLE OR IN PART OR SHALL THE DIMENSIONS BE RELEASED IN ANY MANNER TO ANYONE UNLESS WRITTEN PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.	

Hammonds Model HC150-1P Injector Cart Manual

ITEM	PART NO.	QTY.	DESCRIPTION
1	101014	1	POWER FRAME
2	102224	1	PLUNGER, P10
3	102225	1	FLUID END, P10
4	882949	8	LOCK WASHER, #0 INT. TOOTH
5	881317	4	SCREW, 10-32 x 2"
6	101842	1	CROSSHEAD GUIDE
7	101007	2	RETURN SPRING
8	101006	1	CROSSHEAD
9	101152	2	SLIDE BEARING
10	101005	1	STROKE ADJUSTMENT CAM
11	101003	1	CAM GUIDE
12	101001	1	STROKE ADJUSTMENT KNOB
13	101002	1	POWER FRAME COVER
14	101004	1	LOCK SCREW
15	101009	4	SCREW, 8-32 x 3/8"
16	881086	4	LOCKWASHER, #6
17	101010	4	SCREW, 8-32 x 3/8"
18	881089	4	SCREW, 10-32 x 3/4"
18A	881660	4	SCREW, 10-32 x 2 1/4" (OPTION)
19	102463	2	CHECK VALVE, AFLAS, STD.
	102464	2	CHECK VALVE, VITON, (OPTION)
20	101537	1	O-RING, AFLAS
	101838	1	O-RING, VITON (OPTION)
	101883	1	O-RING, EPDM (OPTION)
21	102226	1	SEAL HOUSING
22	881908	1	SEAL, LIP
23	881045	1	SETSCREW, 1/4-20 x 1"
24	882911	1	CHECK VALVE, 5 PSI, AFLAS, STD.
	101576	1	CHECK VALVE, 5 PSI, VITON (OPT)
25	101088	1	3/8 x 1/4 FNPT TUBE ADAPT.

NO.	REVISION	DATE	BY	APPVD
△	WAS #101671	03/15/04	SS	X
△	WAS #101933	03/15/04	SS	X
△	WAS #102263	09/03/02	SS	X
△	WAS #101008	08/99	SS	X

FROM SER#	DATE	TO SER#	DATE
INJECTOR	10, 12, 14, 16, 18, 20, 24, 28, 30		
	39-41, 89-93, 95-97, 99, 116, 117		

TOLERANCES	
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.	
*TOL. DECIMALS:	*TOL. ANGLES:
.XXX= +/- .005	+/- .5 DEGREES
.XX= +/- .015	
.X= +/- .030	
FRAC.= +/- 1/16	
*CONCENTRICITY: .005 T.I.R.	
*REMOVE BURRS AND BREAK EDGES .005 MIN.	

THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES		HAMMONDS TECHNICAL SERVICES, INC.	
SCALE: MTS	APPROVED PART NUMBER	DRAWN BY: SS	
DATE: 09/23/93		REVISED: 03/15/04	
DRAWING TITLE: HAMMONDS 1P10 PUMP		DRAWING NUMBER: 2668	

Hammonds Model HC150-1P Injector Cart Manual

26	882352	2	LOCK WASHER, 5/16" SS (OPTION)
27	883863	2	SCREW, 5/16-18 x 1 1/4" SS (OPTION)
27A	882361	2	SCREW, 5/16-18 x 2 3/4" SS (OPTION)
28	102480	2	O-RING (OPTION)
29	102747A	1	DUST CAP STD. (OPTION)
	102747	1	DUST CAP (FOR OPTIONAL O-RING)
30	101368	1	O-RING (FOR 102747 OPTION)
31	102746	1	DUST PLUG (OPTION)
32	102300-02	1	BACK-UP RING

ITEM	PART NO.	QTY.	DESCRIPTION
1	102757	1	POWER FRAME, HD ALUM.
2	881045	1	SETSCREW, 1/4-20 x 1" (PART OF #3)
3	102299	1	PLUNGER, P15
4	883342	1	SEAL, LIP
5	102302	1	SLEEVE, TEFLON
6	102301-01	1	SEAL ADAPTER
7	103521	1	O-RING, AFLAS
	103511	1	O-RING, VITON (OPT)
	103522	1	O-RING, KALREZ (OPT)
8	102300-01	1	FLUID END, P15
9	882949	8	LOCK WASHER, #10 INTERNAL
10	883047	4	SCREW, #10-32 x 3"
11	102463	2	CHECK VALVE, 1PSI AFLAS
	102464	2	CHECK VALVE, 1PSI VITON (OPT)
	102642	2	CHECK VALVE, 1PSI KALREZ (OPT)
11A	102413	2	CHK VLV, 1PSI AFLAS, HI-VOL (OPT)
	102413-V	2	CHK VLV, 1PSI VITON, HI-VOL (OPT)
12	101007	2	RETURN SPRING
13	282042	1	CROSSHEAD, HD
14	101152	2	SLIDE BEARING
15	101005	1	STROKE ADJUSTMENT CAM
16	102758	1	PUMP FRAME COVER, HD ALUM
17	101670	1	STROKE INDICATOR
18	101037	1	SCREW, 10-32 x 1 1/2"
19	881126	4	SCREW, #10-32 x 1/2"
19A	881126	4	SCREW, #10-32 x 1/2" (OPT)
20	101001	1	STROKE ADJUSTMENT KNOB
21	103563	1	SPRING, COMPRESSION
22	881301	4	SCREW, #10-32 x 1"
22A	881780	4	SCREW, #10-32 x 2 3/4" (OPT)
23	101038	4	LOCK WASHER, #10 HI COL
24	882911	1	CHECK VALVE, 5 PSI, AFLAS
	101576	1	CHECK VALVE, 5 PSI, VITON (OPT)
	102643	1	CHECK VALVE, 5 PSI, KALREZ (OPT)
25	101088	1	3/8 x 1/4 FNPT TUBE ADAPT

BOLT TORQUE SPECIFICATIONS	
Ref. No.	Assembly Torque
2	5 ft-lbs (7.5 N-m)
10	3.5 ft-lbs (4.7 N-m)
18	3.5 ft-lbs (4.7 N-m)
19	3.5 ft-lbs (4.7 N-m)
21	1.3 ft-lbs (1.7 N-m)
22	3.5 ft-lbs (4.7 N-m)
22A	3.5 ft-lbs (4.7 N-m)

NO.	REVISION	DATE	BY	APPVD	FROM SER#	DATE	TO SER#	DATE
△	ADDED STD DUST CAP	09/30/16	SS	X				
△	ADDED KALREZ OPT	09/20/16	SS	X				
△	ADDED SPRING	03/15/16	SS	X				
△	ADD BACK-UP RING	02/01/10	SS	X				
△	WAS 325 O-RING	06/03/09	SS	X				

DRAWING	LEVELS	VIEW
INJECTOR	40, 136, 139-141, 143	I
	176-179, 181, 201, 20B, 224, 239	

TOLERANCES	
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.	
*TOL. DECIMALS:	*TOL. ANGLES:
.XXX± +/- .005	+/- .5 DEGREES
.XX± +/- .015	
.X± +/- .030	*CONCENTRICITY:
FRAC. ± +/- 1/16	.005 I.I.R.

THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES	
THIS PRINT SHALL NOT BE REPRODUCED OR COPIED IN ANY MANNER TO ANYONE UNLESS WRITTEN PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.	

HAMMONDS TECHNICAL SERVICES, INC.			
SCALE: NTS	APPROVED PART NUMBER	DRAWN BY: SS	
DATE: 10/27/08		REVISED: 09/30/16	
DRAWING TITLE: HAMMONDS 1P15 PUMP			
HEAVY DUTY			DRAWING NUMBER: 5994

Hammonds Model HC150-1P Injector Cart Manual

PARTS INCLUDED IN KITS ARE IDENTIFIED WITH → NOTE: OPTIONAL O-RING ELASTOMERS ARE AVAILABLE.

INSTALL CAP HAND-TIGHT... DO NOT OVER-TIGHTEN!

NOTE: ADAPTER FITTINGS VARY PER APPLICATION... SEE YOUR ASSEMBLY ILLUSTRATION

IMPORTANT! NOTE DIRECTION OF FLOW

VALVE DETAIL SCALE: 2X

ITEM	PART NO.	QTY.	DESCRIPTION	
→ Δ	1	152075	1	BODY, STD.SIGHT FLOW
	2	152002	1	FILTER ELEMENT
→	3	151018	1	GAUGE GLASS
→	4	151002	2	GASKET, BUNA (OPT)
		151007	2	GASKET, VITON (OPT)
		151027	2	GASKET, NEOPR (OPT)
Δ		151020	2	GASKET, AFLAS (OPT)
Δ		151036	2	GASKET, TEF ENCAPSULATED
	5	151005	1	PLUG
Δ	6	152069	1	CAP ASSEMBLY
Δ	7	101070	1	NIPPLE, 1/4" x 1-1/2"
	8	101059-01	1	VENT TUBE, 1/4"
Δ	9	101230	1	ON/OFF VALVE, 1/4"
Δ	10	101057	1	TUBE ADAPTER, 1/4"
Δ	11	152070	1	GUARD, GAUGE GLASS
Δ	12	102787	1	1/4" CH VLV, 5 PSI, AFLAS (OPT)
→		881715	1	1/4" CH VLV, 5 PSI, VITON (OPT)
		102644	1	1/4" CH VLV, 5 PSI, KALREZ (OPT)

Δ	REMV' D #102735 VLV	07/13/21	SS
Δ	ADD TEF ENCAPSUL	07/13/21	SS
Δ	ADDED AFLAS OPT	09/04/20	SS
Δ	ADDED KIT INFO	04/30/18	SS
Δ	ADDED FLUSH VALVE	02/15/17	SS
Δ	ADDED KALREZ OPT	01/18/17	SS
Δ	ADDED NEOPR. OPT	09/27/11	SS
Δ	ADDED OPT VALVE	03/04/10	SS
Δ	WAS #152035	05/13/99	SS
Δ	WAS #152018	05/13/99	SS
Δ	WAS 1/8" NIPPLE	01/23/97	SS
Δ	REVISION	DATE	BY

DRAWING		LEVELS		VIEW
2489	5.6			I
FROM SER#	DATE	TO SER#	DATE	
X	X	X	X	

TOLERANCES ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.		THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES	
*TOL. DECIMALS: .XXX= +/- .005 .XX= +/- .015 .X= +/- .030	*TOL. ANGLES: +/- .5 DEGREES	*CONCENTRICITY: .005 T.I.R.	
*REMOVE BURRS AND BREAK EDGES .005 MIN.		THIS PRINT SHALL NOT BE USED, COPIED OR REPRODUCED IN WHOLE OR IN PART IN ANY MANNER TO AVOID UNLESS NOTED OTHERWISE BY ORIGINATOR FROM HAMMONDS TECHNICAL SERVICES.	

HAMMONDS TECHNICAL SERVICES, INC.			
SCALE: NTS	APPROVED BY: SCG206	DRAWN BY: SS	
DATE: 07/20/93		REVISED: 07/13/21	
DRAWING TITLE: SUCTION CALIBRATION GAUGE			
MAT'L:			DRAWING NUMBER: 3067

Hammonds Model HC150-1P Injector Cart Manual

**INSTALL CAP HAND-TIGHT...
DO NOT OVER-TIGHTEN!**

ITEM	PART NO.	QTY.	DESCRIPTION
2	1	152075	1 BODY, STD. SIGHT FLOW
2	2	152002	1 FILTER ELEMENT
3	3	151015	1 GAUGE GLASS
* 4	4	151002	2 GASKET, BUNA
5	5	151005	1 PLUG
3	6	152079	1 CAP ASSEMBLY
1	7	101070	1 NIPPLE, 1/4" x 1 1/2"
8	8	101059-01	1 VENT TUBE, 1/4"
9	4	101230	1 ON/OFF VALVE, STD. 1/4"
5	10	101057	1 TUBE ADAPTER, 1/4"
11	11	881950	1 GUARD, GAUGE GLASS
4	12	882562	1 STRAP, VINYL COATED
4	13	881292	1 1/4-20 x 3/4" SOC. HD. CAP SS
4	14	103028	1 1/4" FLAT WASHER SS
4	15	881881	1 1/4-20 LOCK NUT SS
OPTIONAL			
* 4	4	151007	2 GASKET, VITON
* 4	4	151023	2 GASKET, EPDM
6	* 4	151026	2 GASKET, KALREZ
7	* 4	151020	2 GASKET, AFLAS
8	* 4	151036	2 GASKET, TEF ENCAPSULATED

NO.	REVISION	DATE	BY	DESCRIPTION
1	REMOV' D 102735 VALV	07/13/21	SS	
2	ADD TEF ENCAPSUL.	07/13/21	SS	
3	ADDED AFLAS OPT	09/04/20	SS	
4	ADDED KALREZ OPT	01/18/17	SS	
5	WAS #101071	02/14/14	SS	
6	ADDED PARTS	06/2008	SS	
7	WAS #152035	05/13/99	SS	
8	WAS #152018	05/13/99	SS	
9	WAS 1/8" NIPPLE	01/23/97	SS	

TOLERANCES		THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES	
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.		SCALE: NTS APPROVED BY: SCG212 DRAWN BY: SS	
*TOL. DECIMALS:	*TOL. ANGLES:	DATE: 07/20/93	REVISED: 07/13/21
.XX± +/- .005	+/- .5 DEGREES	DRAWING TITLE: SUCTION CALIBRATION GAUGE	
.XX± +/- .015	.005 T.I.R.	MAT'L:	
.X± +/- .030	*REMOVE BURRS AND BREAK EDGES .005 MIN.	DRAWING NUMBER: 2489	

Hammonds Model HC150-1P Injector Cart Manual

INSTALL CAP HAND-TIGHT...
DO NOT OVER-TIGHTEN!

ON/OFF VALVE
(1/2" OR 3/4")

FROM
ADDITIVE
TANK

TO PUMP

NOTE:
ADAPTER FITTINGS
VARY PER APPLICATION
...SEE YOUR ASSEMBLY
ILLUSTRATION

FLUSH VALVE
...SEE DETAIL

IMPORTANT!
NOTE
DIRECTION
OF FLOW

VALVE DETAIL
SCALE: 2X

ITEM	PART NO.	QTY.	DESCRIPTION
1	152080	1	BODY, LARGE SIGHT FLOW
2	152025	1	FILTER ELEMENT
3	151014	1	GAUGE GLASS
4	151025	2	GASKET, BUNA-N
5	152042	1	CAP
6	101069	1	NIPPLE, 1/4" X CLOSE
7	881139-02	1	3/8" X 2" VENT TUBE
8	101230	1	ON/OFF VALVE, 1/4"
9	101068	1	ELBOW TUBE FITTING
10	881899	1	GUARD, GAUGE GLASS
11	271125	1	ST ELBOW, 1/4" NPT
12	102463	1	1/4" CK VALVE, 1 PSI, AFLAS
13	881422	2	5/16-18 x 1" HX HD BOLT, SS
14	881417	2	5/16" LOCK WASHER, SS
15	104042	2	5/16" FLAT WASHER, SS

TOLERANCES		THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES		HAMMONDS TECHNICAL SERVICES, INC.	
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.		SCALE: NTS		APPROVED PART NUMBER	
*TOL. DECIMALS: .XX± +/- .005 .XX± +/- .015 .X± +/- .030 FRAC. ± +/- 1/16		DATE: 05/07/19		DRAWN BY: SS	
*TOL. ANGLES: +/- .5 DEGREES		DRAWING TITLE		REVISION: 07/13/21	
*CONCENTRICITY: .005 T.I.R.		SUCTION CALIBRATION GAUGE			
*REMOVE BURRS AND BREAK EDGES .005 MIN.		MAT'L:		DRAWING NUMBER: 2395-1	

Hammonds Model HC150-1P Injector Cart Manual

HAMMONDS SUCTION CALIBRATION GAUGE

CALIBRATION INSTRUCTIONS

- 1) IN ORDER TO CALIBRATE, THE PUMP MUST BE PRIMED AND PURGED OF ALL AIR. THE 3-WAY VALVE MUST BE SET TO INJECT.
- 2) WITH SUPPLY VALVE OPEN, SLOWLY OPEN VENT VALVE. THIS WILL FILL CALIBRATION GAUGE. FILL TO ZERO MARK. DO NOT OVERFILL. ONCE FULL, CLOSE VENT VALVE.
- 3) MAKE NOTE OF ADDITIVE LEVEL IN CALIBRATION GAUGE AND MAIN PRODUCT METER READING. BEGIN CALIBRATION BY FIRST CLOSING THE SUPPLY VALVE AND THEN OPENING THE VENT VALVE. START THE PRODUCT FLOW (SET FOR A SHORT TRIAL RUN).
- 4) AT THE END OF THE RUN, RECORD THE AMOUNT OF ADDITIVE THAT WAS DRAWN FROM THE CALIBRATION GAUGE. RECORD THE AMOUNT OF FUEL PUMPED. CLOSE THE VENT VALVE. OPEN THE SUPPLY VALVE.
- 5) DIVIDE THE AMOUNT OF ADDITIVE USED BY THE VOLUME OF FUEL THAT WAS PUMPED GIVING YOU PPM.
- 6) INCREASE OR DECREASE PERCENTAGE OF STROKE ON DIAPHRAGM PUMP TO OBTAIN DESIRED INJECTION RATIO.

EXAMPLE: (METRIC)
ADDITIVE INJECTED = 500 ML
FUEL DELIVERED = 1785 LITERS

$$\frac{500}{1785} = .280$$

$$\frac{.280}{1000} = .000280 \text{ (280 MILLIONTHS)}$$


OR 280 PPM (PARTS PER MILLION)

EXAMPLE: (US)
ADDITIVE INJECTED = 11.5 oz
FUEL DELIVERED = 350 GALLONS

$$\frac{11.5}{350} = .0328$$

$$\frac{.0328}{128 \text{ oz/gal}} = .000256 \text{ (256 MILLIONTHS)}$$

OR 256 PPM (PARTS PER MILLION)

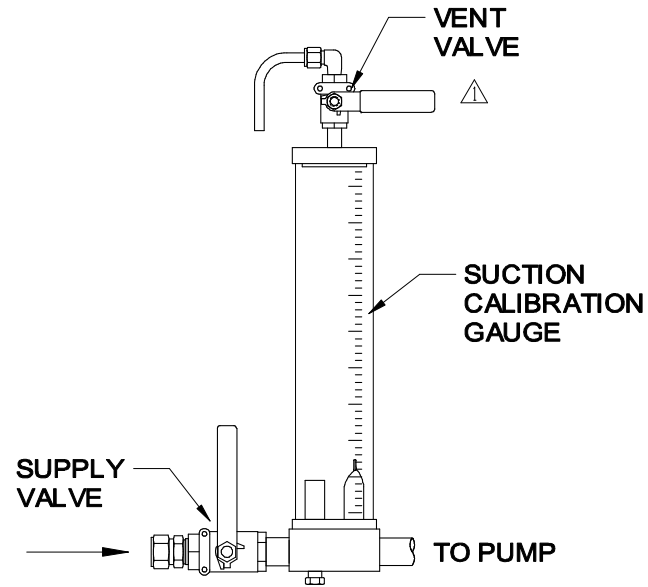

TOLERANCES		THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES		HAMMONDS TECHNICAL SERVICES, INC.	
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				SCALE: NTS	APPROVED BY:
*TOL. DECIMALS:	*TOL. ANGLES:	DATE: 04/07/93		DRAWN BY: SS	REVISYD: 07/13/21
.XX± ±/.005	+/- .5 DEGREES	DRAWING TITLE: SUCTION CALIBRATION GAUGE			
.XX± ±/.015	*CONCENTRICITY:	.005 I.I.R.			
.X± ±/.030	THIS PRINT SHALL NOT BE USED, COPIED OR REPRODUCED IN WHOLE OR IN PART FOR ANY OTHER PURPOSES WITHOUT THE WRITTEN PERMISSION OF HAMMONDS TECHNICAL SERVICES.		DRAWING NUMBER: 1891		
*REMOVE BURRS AND BREAK EDGES .005 MIN.					
FINISH 125					
NO.	REVISION	DATE	BY	FROM SER#	DATE
1	WAS ECONOMY VALVE	07/13/21	SS	1891	1,2
2	INITIAL RELEASE	04/07/93	SS		
3	REVISION				

