

**OPERATING INSTRUCTIONS  
AND  
MAINTENANCE MANUAL  
FOR**

**MODEL SPI-1\***

(\*Pump model varies)

**SINGLE POINT INJECTOR**

Manufactured by



**HAMMONDS TECHNICAL SERVICES, INC.**

6807 West Little York Rd  
Houston TX 77040

(281) 999-2900

Fax: (713) 896-9419

[www.hammondscos.com](http://www.hammondscos.com)

January 2025

# Hammonds Model SPI-1 Manual

## TABLE OF CONTENTS

Special Notice to Users	3
Installation and Preparation for Startup	4-5
Start Up	6
Normal Operation	7
Proper Additive Injection Ratios	7
Draining and Storage of SPI	7
Trouble Shooting the System	8
Preventive Maintenance	9
Preventive Maintenance Schedule	10
Desiccant Dryer Instructions	10
DRAWINGS AND PARTS LISTS:	
System Layouts: Pump and Plumbing	13-14
Drive Unit Assembly and Parts	15
5SF Sight Flow Indicator/Siphon Tube	16-17
1S Injector Pump	18
Diaphragm Replacement Instructions	19
Plunger Pumps: P2 thru P10	20-24
Siphon for 32oz bottle (optional)	25

# Hammonds Model SPI-1 Manual

## SPECIAL NOTICE TO USERS

PLEASE READ CAREFULLY BEFORE  
OPERATING EQUIPMENT

Note: the photos in this manual show a vertical flow unit. Your system may be arranged differently. The concepts are the same.

This additive injector system is designed to give consistent dependable performance when operated and maintained according to manufacturer's recommendations. However, being a mechanical device, it is subject to failure from improper installation, wear, human error and operating environments beyond the control of the system. Because of this fact, it is the responsibility of the operator to make certain that:

- A. The system is installed properly.
- B. The system is being operated properly.
- C. The system is actually running during product transfer.
- D. The system is checked after the transfer operation to make certain the proper amount of additive was injected during the operation.

The performing of these checks by the operator eliminates the possibility of product not having the proper additive ratio as required. Therefore, since the manufacturer cannot be present during each transfer operation, the responsibility for checking the performance of the system is that of the operator. Should there be any questions whatsoever, the operator should consult the distributor from whom the unit was purchased.

**Do Not Take Chances.....Do Not Guess.....Be Absolutely Certain That the System Is Installed And Working As It Should.**


**The user/operator carries the final responsibility to make certain the system is operating properly.**



# Hammonds Model SPI-1 Manual

## INSTALLATION AND PREPARATION FOR STARTUP

The Hammonds Model SPI fluid powered Single Point injector is shipped complete and ready to operate. The system should include appropriate fittings to suit your specific application.

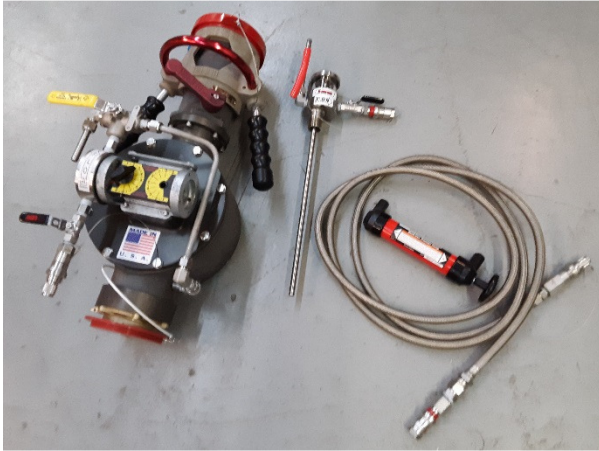

1. Unpack only what is needed. The SPI injector, the "5SF" 5-gallon siphon tube adapter, the stainless braided suction hose, priming hand pump and desiccant dryer cartridge from the case.

2. The SPI injector comes equipped with an integral single point nozzle. When installing the unit, users must ensure that both nozzles (upstream and downstream of the unit) are positively locked to their SPR



connectors. **CAUTION; DO NOT LIFT BY THE INJECTION PUMP! USE THE NOZZLE HANDLES.** With the SPI nozzle crank handle in the closed position, check the strainer coupling quick disconnect device for positive locking. Be sure the nozzle is securely locked to the aircraft by attempting to remove the nozzle with the nozzle crank handle in the open position.



**Any nozzle that can be disconnected from the SPR with the nozzle crank handle in the open position is defective and must be removed from service immediately.**

LIFT BY  
HANDLES  
ONLY!



# Hammonds Model SPI-1 Manual

3. Using a fresh 5-gallon pail of additive, remove the cap from the pail and knock out the center plastic plug. Thread the 5SF into the cap and then re-install this assembly onto the pail as shown in the following photo.



4. Remove the yellow rubber caps from the desiccant dryer cartridge and install it onto the rubber tube on the 5SF.
5. Remove the dust cap from the outlet end of the 5SF assembly. Remove the dust plug from one end of the suction hose. Couple the suction hose to the 5SF. Be certain that the coupling is fully connected.



6. Remove the dust cap from the other end of the suction hose. Remove the dust plug from the injector pump additive inlet on the SPI and fully connect the coupling.
7. The suction hose is 10 ft. long so; the pail of additive should be positioned below and as near to the SPI injector as possible.



CAUTION; Do not bend the supply hose as it may kink, starving the pump of fluid and causing erratic injection performance. The injector will pull a minimal suction lift.

8. Connect the SPR hose nozzle into the inlet end of the SPI. With the SPR nozzle crank handle in the closed position, check the strainer coupling quick disconnect device for positive locking. Prior to pressurizing the hose, be sure the nozzle is securely locked to the SPI by attempting to remove the nozzle with the nozzle crank handle in the open position. Now fueling can begin.

# Hammonds Model SPI-1 Manual

## START UP

1. If you are attempting start up for the first time, the pump is “dry”. Remove the desiccant cartridge from the hose and connect the “out” end or bottom port of the priming hand pump to this hose snugly.



Hand Pump



As the system starts, after a brief period of running, you will notice pulses of additive in the sight glass on the 5SF. The injector is now primed and will continue to inject additive as fueling continues and an adequate supply of additive is present.

2. Have a container ready to catch the fluid from the bleed tube on the pump. Place the valve handle in the bleed position as shown below.



Place container under bleed tube

With the hoses connected properly as described above, simply pump the priming pump a few of times until fluid exits the bleed tube.

# Hammonds Model SPI-1 Manual

## FLOW CONSIDERATIONS

The Hammonds Model SPI requires a minimum of 50 and up to 250 GPM to deliver consistent ratios. This does not mean that the system cannot be used in cases where startup and shutdown fall under the 50 GPM minimum. Check with the factory if you have any questions in the area of performance.



**CAUTION; Do not attempt to use this device without understanding and following proper safety precautions regarding system grounding, fire safety, and special handling for potentially dangerous additives.**

Consult your Engineering Department for their specific instructions. Make certain all personnel involved with this system are thoroughly familiar with safe operating practices.

If no factory-authorized distributor is available, consult the factory directly for assistance.

**HAMMONDS TECHNICAL SERVICES, INC.  
6807 West Little York Rd  
Houston TX 77040  
Phone: (281) 999-2900  
Fax: (281) 847-1857**

## POINT OF INJECTION OF ADDITIVE

Some additives may adversely affect other components in the product handling systems, for example seals in meters, valve seals, aluminum and filter elements to name a few. The Hammonds SPI injector system utilizes a precision rotary vane pump, which does an excellent job of mixing the additive in the product, and does not inject in large slugs. Because of this superior mixing and very small concentration of additive in any one point, many customers feel that this is not a problem. **SOME DO**, and therefore, should use their own judgment as to the effect of these additives. **Hammonds Technical Services, Inc. can only advise you of the possible hazards.** The SPI comes with the injection point directly ahead of the fluid motor for good blending.

# Hammonds Model SPI-1 Manual

## NORMAL OPERATION

Following initial start up, the system requires very little attention other than making certain that additive levels are maintained. Operators will quickly become accustomed to the performance of the system by observing the 5SF Sight Flow Indicator. On-spec injection will cause a certain response in the Sight Flow Indicator, and with some practice, operators will be able to observe the system at a glance. However, during a busy workload, these visual checks will provide assurance to the operator that the system is functioning.

Good record keeping of additive inventory and use levels compared to fuel handled can give a good indication that additive is on specification. Test such as the refractometer for FSII content should be the final test to verify additive injection ratios.

## PROPER ADDITIVE INJECTION RATIOS

The only true evaluation for proper ratio is the **ASTM D-5006** evaluation for fuel system ice inhibitor (FSII). Contact Hammonds Fuel Additives, Inc. for supply of quality fuel system ice inhibitor and fuel testing procedures.

## DRAINING AND STORAGE OF SPI

After fueling is completed follow these steps in their proper order to drain fuel and additive from the SPI.

1. Disconnect the fuel hose single point nozzle from the SPI inlet.
2. Disconnect the additive supply hose between the 5-gallon pail and the SPI injector. Reinstall the dust plug and dust cap into each end of the hose.
3. Install the dust plug into the injector pump additive inlet and install the dust cap onto the 5SF. These dust plugs and caps are important to protect the coupling ends from damage and to help keep the additive clean.
4. Disconnect the SPI from the fueling port of the aircraft. **BE CAREFUL NOT TO LIFT IT BY THE PUMP TUBING!**
5. Unscrew the 5SF from the cap of the 5-gallon additive pail. If there is enough additive left in the pail, and you need to store it, install a 3/4" NPT pipe plug into the plastic pail cap. Otherwise, dispose of the empty container properly.
6. The SPI and all components may now be returned to their place in the case.

# Hammonds Model SPI-1 Manual

## **TROUBLE SHOOTING THE SYSTEM**

The following conditions are given as a means of troubleshooting the system. Each condition lists a number of possible causes. In most cases, trouble can be solved by the use of this section. Please read it carefully before attempting repairs or making changes in the system.

### **FLUID MOTOR IS NOT TURNING**

- A. Insufficient flow to turn the motor. A minimum flow of about 50 GPM is needed to start the system.
- B. A diverter valve is blocked downstream of the system, blocking the fuel flow through the system.
- C. A valve is closed upstream of the fluid motor starving the product flow.
- D. If the unit has been recently serviced internally, the rotor might be installed backwards. Consult the factory before disassembly.

### **FLUID MOTOR IS TURNING AND PUMP IS RUNNING, BUT WITH NO OUTPUT**

- A. The pump is not getting additive. Check all connections in the line between the pump and the pail. Make certain that the quick disconnect couplings are fully coupled.
- B. The vent on the pail is not open causing the pump to pull a vacuum. Check to see if the rubber cap has been removed from the dryer cartridge, if so equipped.
- C. The injector pump is not priming itself at initial start up. Although the system will operate at 50 GPM, the fueling rate needs to be at least 150 GPM at first to prime the rotary vane pump. This will give the pump the speed it needs to prime itself. After it is primed it will continue to pump.

D. The pump may need to be manually primed. Install the priming bulb as described in the Start Up section. Give the priming bulb a few squeezes until additive flows from the bleed hose. Once a clear, bubble-free, stream of additive is observed, disconnect the priming hose. The pump should continue to inject.

E. The additive pail is empty...don't laugh, it happens.

### **THE INJECTOR IS OPERATING BUT WITH REDUCED OUTPUT**

- A. Air leak in suction side of system.
- B. Defective tubing or piping on suction side.
- C. A leak in threaded connections or quick disconnects - suction side.
- F. Check to see that the supply hose is not kinked or crushed, starving the pump.
- D. A leak in the 5SF glass seal.
- E. Fluid motor vanes are badly worn. This would only be probable after a high number of hours of operation.

# Hammonds Model SPI-1 Manual

## PREVENTIVE MAINTENANCE

1. Make certain to use only clean, fresh additive that has been stored in a sealed container. Most additives are moisture sensitive. Some will form heavy crystals if allowed to accumulate moisture. These crystals will stop the pump in very short order.
2. Check the additive filter screen (5SF Sight Flow Indicator) at least once a month. More often if there is an indication of possible contamination.
3. Check the system for leaks at every use. This is an extremely important safety procedure, since some additives are flammable, caustic and corrosive.
4. Check for leaks from the seal that is located at the exit point of the injector output shaft in the side plate housing. This should be done at each operation. Leakage at this point usually indicates that the mechanical seal inside the rotor housing is leaking. A leak here will be fuel, and is not only dangerous from a fire standpoint, but will quickly ruin the bearings on the rotor shaft, since all lubricant will be washed away.
5. Check the fittings for leakage around the suction strainer or sight flow indicator, if one is used on the pump. Check this fitting each time the filter is changed or cleaned. Make certain there are no leaks in the suction line. A very small leak will either change the operation of the pump or prevent it from operating all together.
6. Visually check around the pump housing and make certain there is no leaking of additive around the pump fluid end. If there is, check the tightness of the head screws. (40 inch pounds each)
7. Check the grease around the eccentric drive bearing in the pump every 12 months. Use a good quality waterproof grease.
8. It is recommended that the injector diaphragm be changed at least every 12 months. Every 6 months under extreme operating conditions. Doing so will prevent unexpected failures and unscheduled downtime.

Hammonds injectors are very dependable. If installed properly and sized appropriately to the application, they require very little maintenance. Remember; keep the additive clean, and the suction strainer clean. If you have problems with the pump working, it is usually in the suction side of the system (between the injection pump and the additive pail). Suction lines and fittings are notorious for leaking just enough to prevent the system from working. Always check to ensure optimum suction conditions should problems occur.

Remember that a leak in the suction allows air from the outside to be introduced into the system. It does not always mean a visible leak of additive. If the pump loses its prime or output is erratic, chances are good that there are problems in the suction side. Otherwise, if it is working...leave it alone.

## PREVENTATIVE MAINTENANCE SCHEDULE

**NOTE:** It is important to read the section on preventative maintenance. These intervals are general, and may vary according to individual applications and severity of service.

# Hammonds Model SPI-1 Manual

SERVICE FUNCTION	0-1 HOUR DAILY	1-2 HOUR DAILY
Check additive filter screen	Monthly	Monthly
Check system for additive/fuel leaks	Daily	Daily
Inspect diaphragm or plunger seals	12 Months	6 Months
Replace diaphragm or plunger seals	12 Months	As needed
Check eccentric bearing grease	6 Months	3 Months
Check stroke adjustment parts for looseness	Monthly	Monthly
Replace stroke adjustment parts	24 Months	As needed
Disassemble and inspect fluid motor housing and internal parts	12 Months	8 Months
Check nozzle screen, if equipped	Monthly	Bi-weekly

## DESICCANT DRYER

Your Hammonds additive system may include either a custom additive pail or one of several Sight Flow Indicators. Both custom pails and the 5-SF and 55-SF Sight Flow Indicator come equipped with a desiccant dryer cartridge. These units come in several different sizes.

Most systems come equipped with the standard 3/4" cartridge. This unit is attached to the pail or Sight Flow Indicator via a short length of black rubber hose. The cartridge has a housing constructed of a clear poly material and is filled with a blue colored desiccant crystal. All these units are shipped from the factory with small yellow caps on the ends of the cartridge.

The purpose of all desiccant dryers is simply to remove moisture from the air as the system breathes. All pails or portable sources of additive supply must be vented to atmosphere in order for the injector to operate. If moisture in this venting air is not removed, some additives are either ruined or seriously damaged. Fuel system icing inhibitor (FSII) FIZZY®, for example, is designed to seek out water in a fluid. So, when enough moisture is absorbed into the container, the FIZZY® (FSII) is diluted and at some point will be ruined. Biobor® JF, an anti-fungal material, will form crystals in the presence of moisture and not only perform unsatisfactorily as an additive, but will stop up pumps and lines as well.

The following instructions apply to all desiccant cartridges:

A. Remove the yellow caps when the system is placed into service.

B. Observe the color of the desiccant. The original color is blue. As moisture is absorbed, the color will change to pink. When the cartridge is completely pink, it should either have its contents removed, dried and replaced, or the entire unit replaced.

**C. NOTE:** The contents can be removed from plastic cartridge, placed on a pan and baked at 400°F in a conventional oven until the moisture has been removed. When the color blue returns, the cooled material may be reinstalled into the cartridge and is again ready for service.


**D. COLOR** change and cartridge life is totally dependent on humidity. The more moist the air, the shorter the life. Keeping it dry is especially important if additive is not consumed rapidly. Check daily and service the dryer cartridge as needed.

# Hammonds Model SPI-1 Manual

This page left intentionally blank.

|


# Hammonds Model SPI-1 Manual

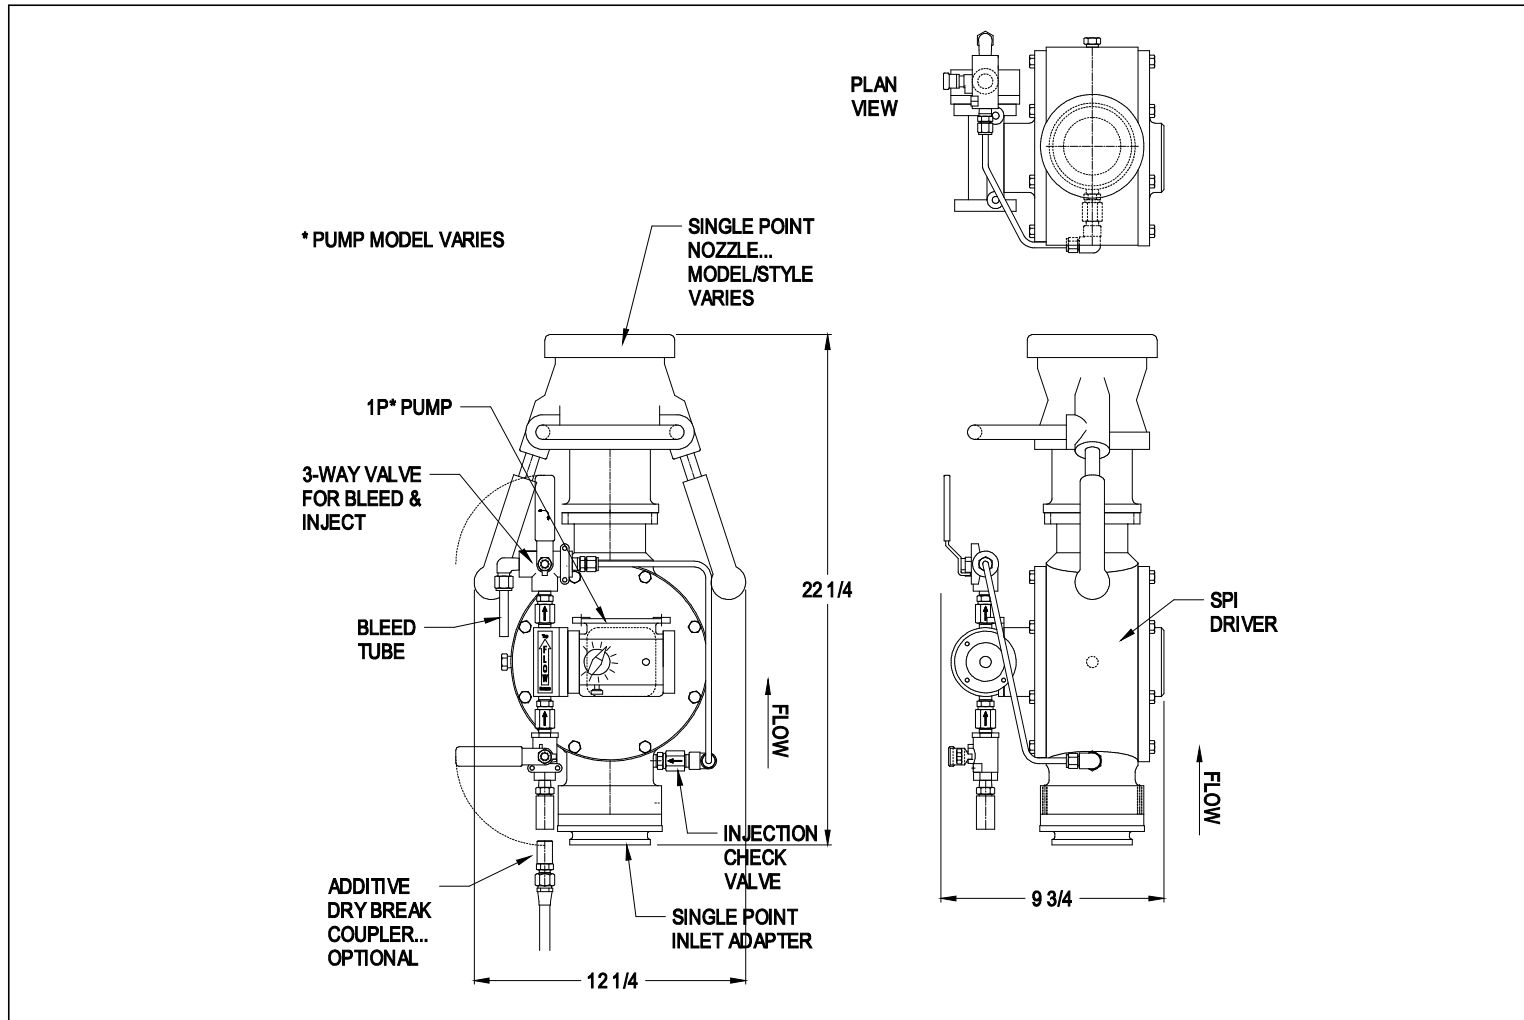

<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <td style="width: 10%;">NO.</td> <td style="width: 15%;">REVISION</td> <td style="width: 15%;">DATE</td> <td style="width: 10%;">BY</td> <td style="width: 10%;">APPVO</td> </tr> <tr> <td></td> <td></td> <td></td> <td></td> <td></td> </tr> </table>					NO.	REVISION	DATE	BY	APPVO						*TOLERANCES* ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.		THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES THIS PRINT SHALL NOT BE USED, COPIED OR REPRODUCED IN WHOLE OR IN PART AND SHALL BE RETURNED TO THE ORIGINAL SOURCE IN ANY MANNER UNLESS WRITTEN PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.		HAMMONDS TECHNICAL SERVICES, INC. SCALE: <b>NTS</b> DATE: <b>10/07/24</b>		APPROVED PART NUMBER DRAWN BY: <b>SS</b> REVISED:	
					NO.	REVISION	DATE	BY	APPVO													
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th>DRAWING</th> <th>LEVELS</th> <th>VIEW</th> </tr> <tr> <td>SPI-1</td> <td>135-137</td> <td>I</td> </tr> </table>					DRAWING	LEVELS	VIEW	SPI-1	135-137	I	*TOL. DECIMALS: .XXX= +/- .005 .XX= +/- .015 .X= +/- .030 FRAC. = +/- 1/16		*TOL. ANGLES: +/- .5 DEGREES		*CONCENTRICITY: .005 T.I.R.		DRAWING TITLE <b>HAMMONDS MODEL SPI-1P*</b>		VERTICAL FLOW UP			
DRAWING	LEVELS	VIEW																				
SPI-1	135-137	I																				
<table border="1" style="width: 100%; border-collapse: collapse;"> <tr> <th>FROM SER#</th> <th>DATE</th> <th>TO SER#</th> <th>DATE</th> </tr> <tr> <td>X</td> <td>X</td> <td>X</td> <td>X</td> </tr> </table>					FROM SER#	DATE	TO SER#	DATE	X	X	X	X	SURFACE FINISH: <b>125</b> *REMOVE BURRS AND BREAK EDGES .005 MIN.				APPROVED PART NUMBER DRAWING NUMBER: <b>8698</b>					
FROM SER#	DATE	TO SER#	DATE																			
X	X	X	X																			

# Hammonds Model SPI-1 Manual

\* STD PUMP MODELS:  
 -S  
 -P2  
 -P5  
 -P6  
 -P7  
 -P10

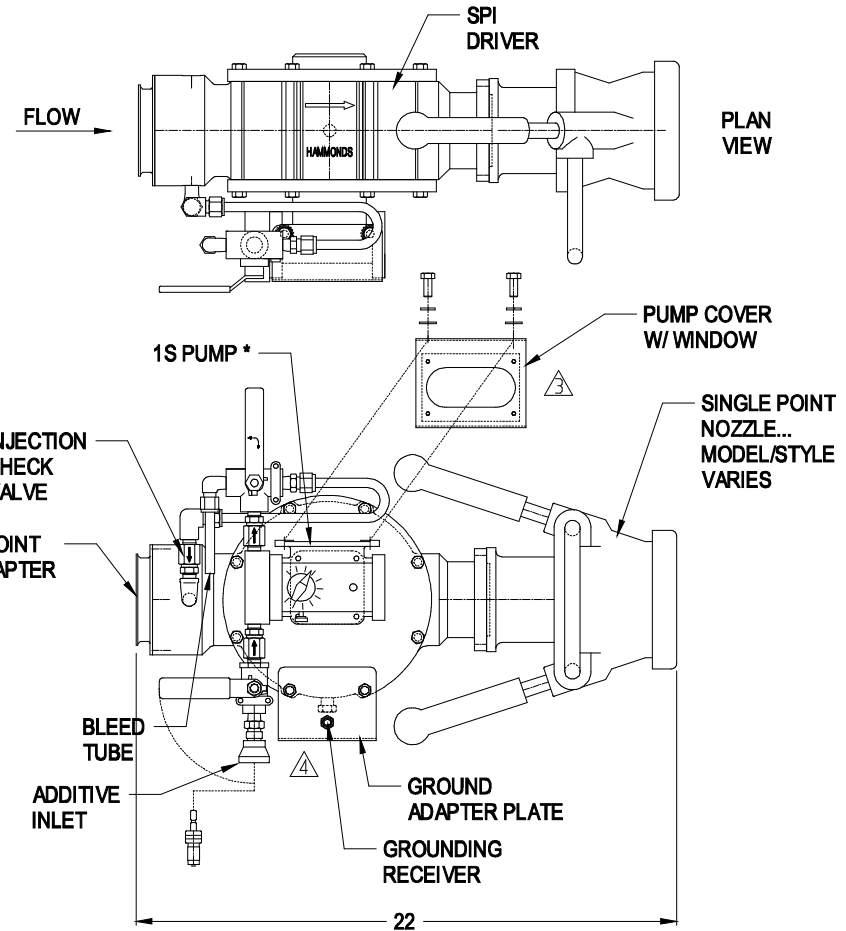

△	ADD GROUND RECV'R	11/29/23	SS	JH
△	ADDED PUMP COVER	11/15/23	SS	JH
△	NEW CHECK VALVES	11/10/23	SS	JH
△	REMY'D PRIME BULB	11/19/19	SS	JH
△	INITIAL RELEASE	06/07/17	SS	X
NO.	REVISION	DATE	BY	APPVD


DRAWING	LEVELS	VIEW	
SPI-1	87-89	1	
FROM SER#	DATE	TO SER#	DATE
X	X	X	X

\*TOLERANCES\*  
 ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.  
 \*TOL. DECIMALS:  
 .XXX± +/- .005  
 .XX± +/- .015  
 .X± +/- .030  
 FRAC. = +/- 1/16  
 \*TOL. ANGLES:  
 +/- .5 DEGREES  
 \*CONCENTRICITY:  
 .005 T. I. R.  
 \*REMOVE BURRS AND BREAK EDGES .005 MIN.

THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES  
 THIS PRINT SHALL NOT BE LOANED, COPIED OR REPRODUCED IN WHOLE OR IN PART NOR SHALL THE CONTENTS BE REVEALED TO ANY NUMBER TO WHOME UNLESS WRITTEN PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.

HAMMONDS TECHNICAL SERVICES, INC.			
SCALE	NTS	APPROVED PART NUMBER	DRAWN BY
DATE	06/07/17	SPI-1 *	SS
DRAWING TITLE		REVISED	11/29/23
HAMMONDS MODEL SPI-1 *			
HORIZ FLOW			DRAWING NUMBER
			7603

# Hammonds Model SPI-1 Manual

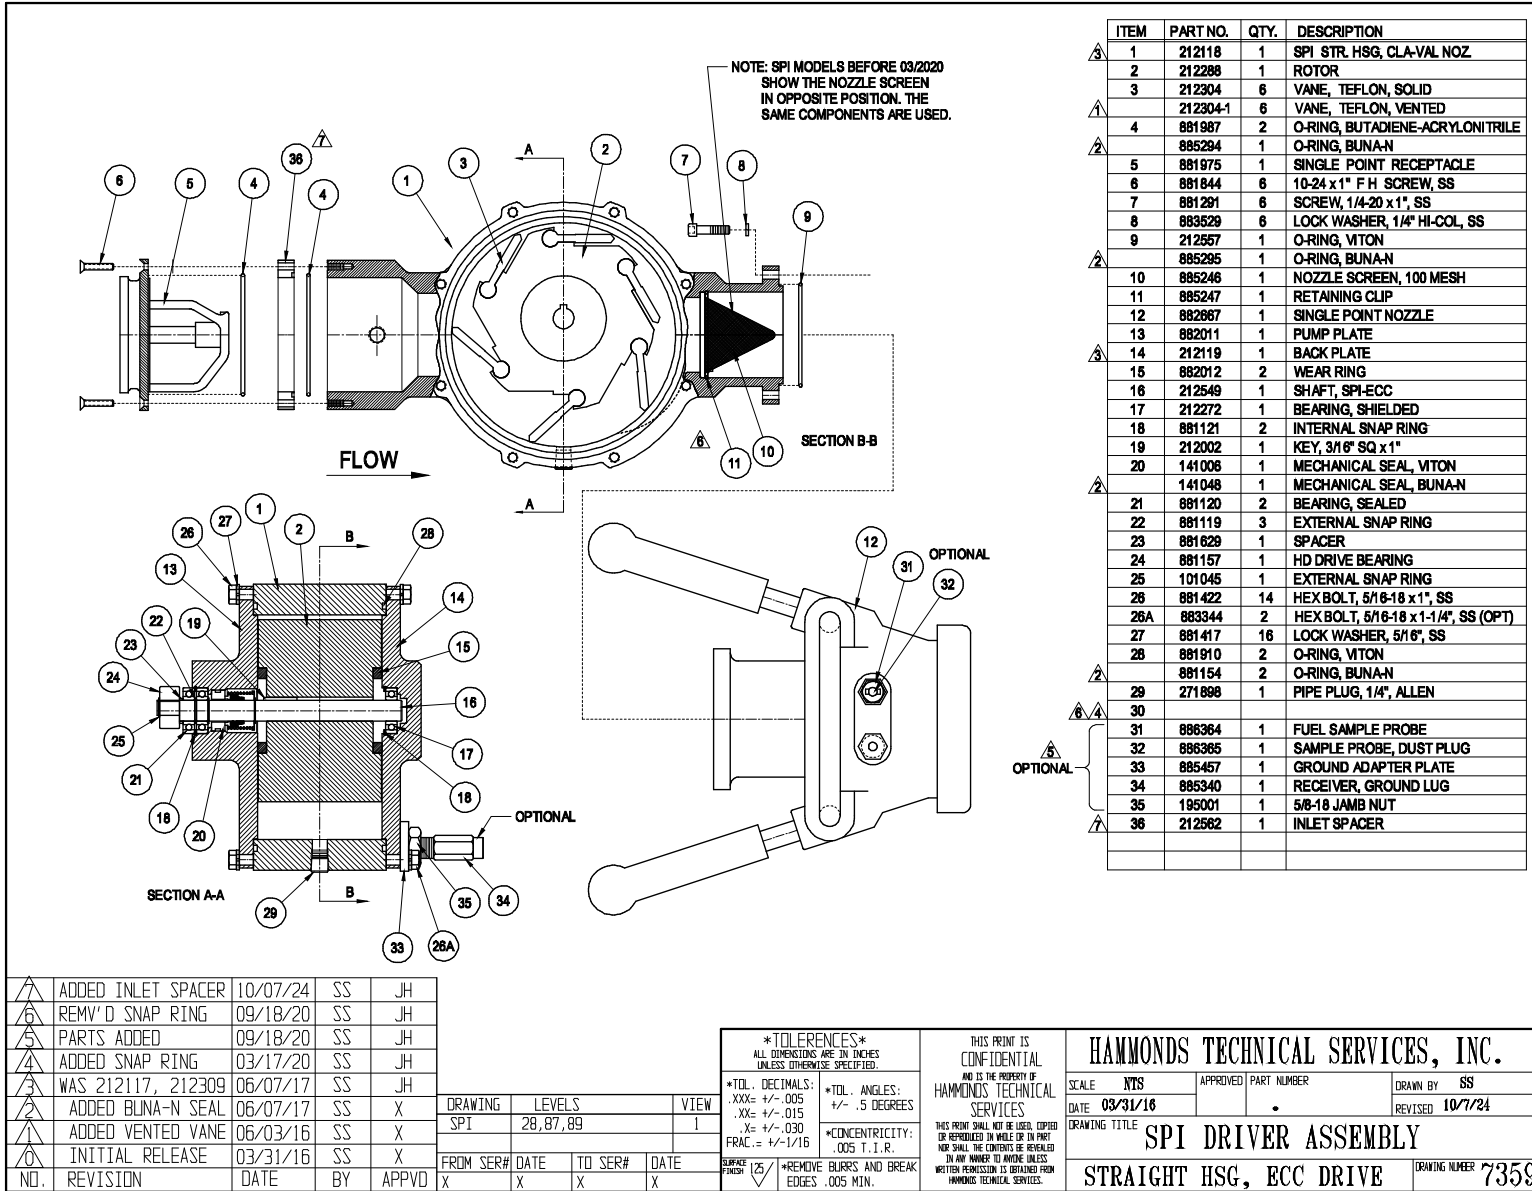

△	ADDED INLET SPACER	10/07/24	SS	JH
△	REMV'D SNAP RING	09/18/20	SS	JH
△	PARTS ADDED	09/18/20	SS	JH
△	ADDED SNAP RING	03/17/20	SS	JH
△	WAS 212117, 212309	06/07/17	SS	JH
△	ADDED BUNA-N SEAL	06/07/17	SS	X
△	ADDED VENTED VANE	06/03/16	SS	X
△	INITIAL RELEASE	03/31/16	SS	X
NO.	REVISION	DATE	BY	APPVD

DRAWING	LEVELS	VIEW	
SPI	28, 87, 89	1	
FROM SER#	DATE	TO SER#	DATE
X	X	X	X

**\*TOLERANCES\***  
ALL DIMENSIONS ARE IN INCHES  
UNLESS OTHERWISE SPECIFIED.

\*TOL. DECIMALS:  
.XXX= +/- .005  
.XX= +/- .015  
.X= +/- .030  
FRAC.= +/- 1/16

\*TOL. ANGLES:  
+/- .5 DEGREES

\*CONCENTRICITY:  
.005 T.I.R.

REMOVE BURRS AND BREAK EDGES .005 MIN.


THIS PRINT IS  
CONFIDENTIAL  
AND IS THE PROPERTY OF  
HAMMONDS TECHNICAL  
SERVICES

THIS PRINT SHALL NOT BE LOANED, COPIED  
OR REPRODUCED IN WHOLE OR IN PART  
AND SHALL BE RETURNED TO THE  
ISSUING OFFICE IN ANY MANNER TO AVOID UNLESS  
WRITTEN PERMISSION IS OBTAINED FROM  
HAMMONDS TECHNICAL SERVICES.


**HAMMONDS TECHNICAL SERVICES, INC.**

SCALE: NTS	APPROVED PART NUMBER	DRAWN BY: SS	REVISED: 10/7/24
DATE: 03/31/16			
DRAWING TITLE: <b>SPI DRIVER ASSEMBLY</b>			
STRAIGHT HSG, ECC DRIVE			DRAWING NUMBER: 7359

# Hammonds Model SPI-1 Manual

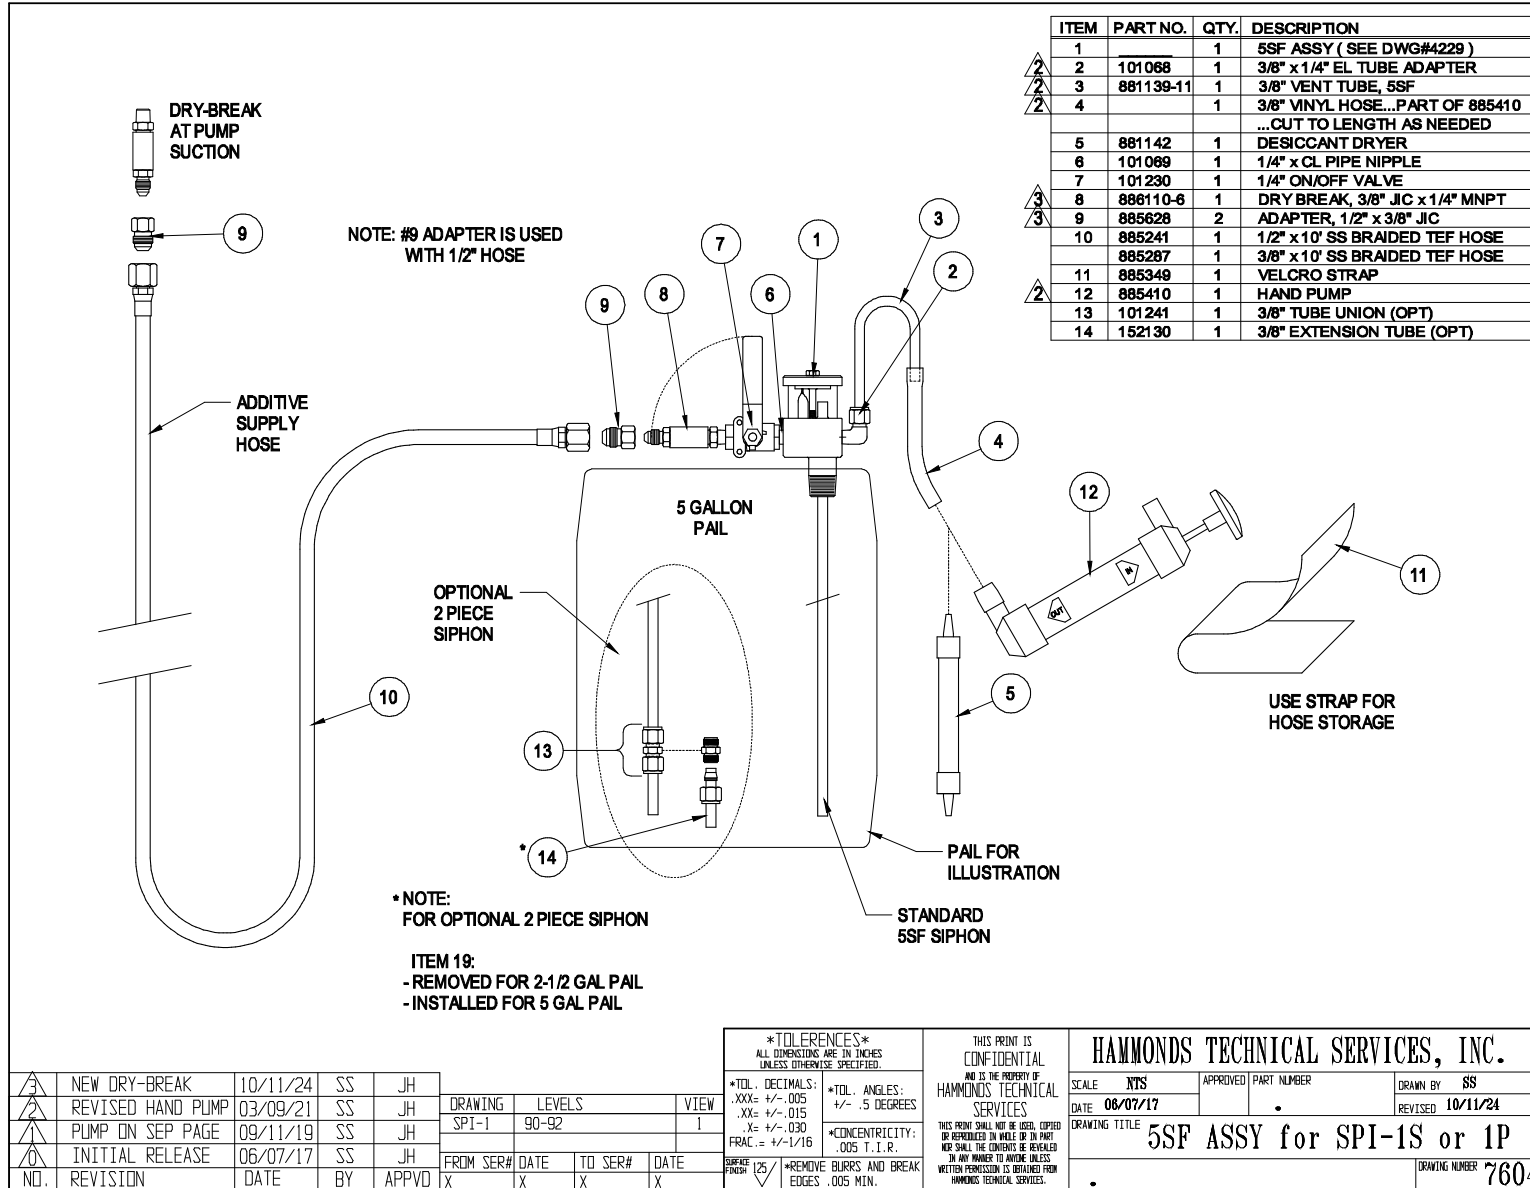

# Hammonds Model SPI-1 Manual

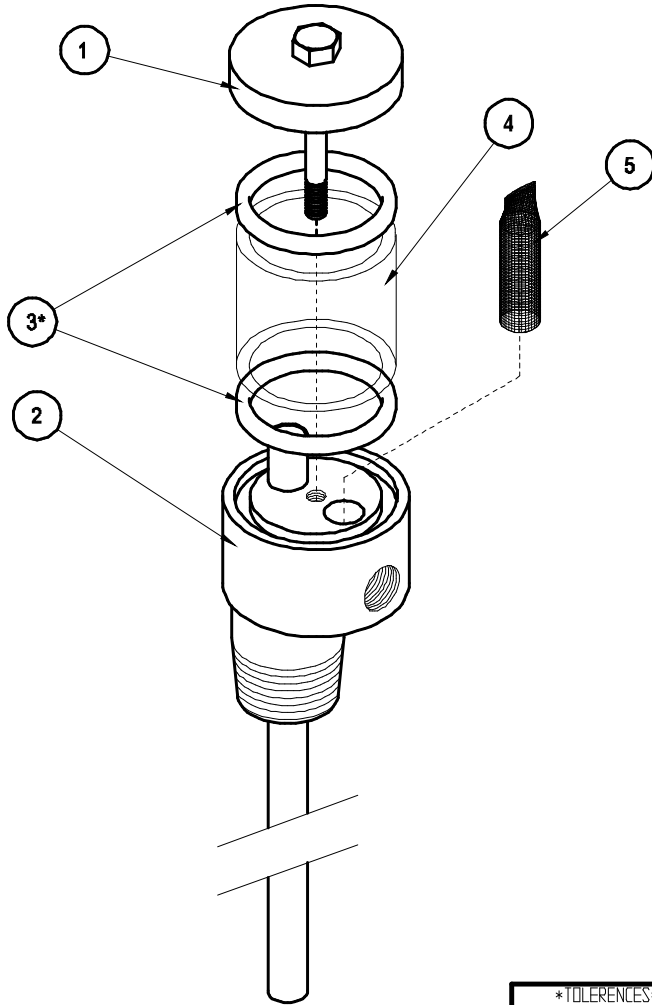

ITEM	PART NO.	QTY.	DESCRIPTION
1	152074	1	CAP, ASS'Y.
2	152084	1	BODY, ASS'Y. 5SF
3	151002	2	O-RING, BUNA
* 3	151020	2	O-RING, AFLAS (OPT)
* 3	151007	2	O-RING, VITON (OPT)
* 3	151027	2	O-RING, NEOPRENE (OPT)
* 3	151028	2	O-RING, KALREZ (OPT)
4	151001	1	GLASS
5	152002	1	FILTER ELEMENT

\* NOTE: THIS COMPONENT IS PART  
OF VARIOUS ASSEMBLIES

*TOLERANCES* ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.				THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES		HAMMONDS TECHNICAL SERVICES, INC.	
*TOL. DECIMALS: .XXX= +/- .005 .XX= +/- .015 .X= +/- .030 FRAC.= +/- 1/16		*TOL. ANGLES: +/- .5 DEGREES		*CONCENTRICITY: .005 T.I.R.		SCALE: <b>NTS</b>	APPROVED BY: _____
*REMOVE BURRS AND BREAK EDGES .005 MIN.		SURFACE FINISH		THIS PRINT SHALL NOT BE USED, COPIED OR REPRODUCED IN WHOLE OR IN PART UNLESS THE USER HAS BEEN ADVISED IN ANY MANNER TO DO SO UNLESS WRITTEN PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.		DATE: <b>10/11/01</b>	DRAWN BY: <b>SS</b>
DRAWING: <b>0159</b>		LEVELS: <b>7,8</b>		VIEW: <b>1</b>		RE-REVISED: <b>07/21/21</b>	
NO. <b>1</b>		REVISION		DATE		BY	
ADD AFLAS, KALREZ		07/21/21		SS		JH	
INITIAL RELEASE		10/11/01		SS		X	
NO.		REVISION		DATE		BY	
APPVD		DATE		BY		APPVD	
FROM SER#		DATE		TO SER#		DATE	
X		X		X		X	
DRAWING TITLE						<b>5SF SIGHT FLOW INDICATOR</b>	
* BASE 5SF						DRAWING NUMBER <b>4229</b>	



# Hammonds Model SPI-1 Manual

**\*WARNING...**  
FAILURE TO TORQUE SCREWS PROPERLY TO 40 IN. LBS. WILL REDUCE PUMP HEAD PERFORMANCE, RESULTING IN INSUFFICIENT INJECTION RATIO.

⑩ ROTATE DIAL FULLY IN OPPOSITE DIRECTION (CLOCKWISE) BRINGING DIAPHRAGM AT REST AGAINST POWER FRAME.

⑪ REINSTALL SCREWS, TAKING EACH ONE DOWN BY HAND UNTIL IT STOPS. TIGHTEN SCREWS TO 40 IN. LBS. \* IN THE ORDER SHOWN BELOW. TORQUE EACH SCREW IN THE PATTERN, THEN REPEAT THE TORQUE SEQUENCE ONLY ONCE!

⑫ ROTATE DIAL COUNTER CLOCKWISE ENOUGH TO INSTALL DRIVE BEARING. INSTALL SNAP RING.

⑬ REMOVE DIAL KNOB. REINSTALL PLASTIC COVER. REINSTALL DIAL KNOB AND POSITION IT ON ORIGINAL % SETTING. INSTALL LOCK SCREW, LOCK DIAL IN PLACE.

**NOTE: AFTER THIS PROCEDURE IS COMPLETE, YOU MUST RECALIBRATE THE INJECTOR TO YOUR SPECIFICATIONS.**

FOR TECHNICAL ASSISTANCE CALL  
HAMMONDS TECHNICAL SERVICES  
(281) 999-2900

**HAMMONDS TECHNICAL SERVICES, INC.**

SCALE	NTS	APPROVED BY:	DRAWN BY
DATE	2/11/92		REVISED 4/10/92
DRAWING TITLE			DRAWING NUMBER
<b>"S" DIAPHRAGM REPLACEMENT</b>			<b>1459</b>

# Hammonds Model SPI-1 Manual

ITEM	PART NO.	QTY.	DESCRIPTION
1	101014	1	POWER FRAME
2	102266	1	PLUNGER, P2
3	102267	1	FLUID END, P2
4	882949	8	LOCK WASHER, #10 INT. TOOTH
5	881780	4	SCREW, 10-32 x 2 3/4"
6	101842	1	CROSSHEAD GUIDE
7	101007	2	RETURN SPRING
8	101006	1	CROSSHEAD
9	101152	2	SLIDE BEARING
10	101005	1	STROKE ADJUSTMENT CAM
11	101003	1	CAM GUIDE
12	101001	1	STROKE ADJUSTMENT KNOB
13	101002	1	POWER FRAME COVER
14	101004	1	LOCK SCREW
15	101009	4	SCREW, 8-32 x 3/8"
16	881086	4	LOCKWASHER, #6
17	101010	4	SCREW, 6-32 x 3/8"
18	881089	4	SCREW, 10-32 x 3/4"
18A	881660	4	SCREW, 10-32 x 2 1/4" (OPTION)
19	104321	2	CHECK VALVE, 1/8", 1 PSI, AFLAS
	104320	2	CHECK VALVE, 1/8", 1 PSI, VITON (OPT)
20	102269	1	O-RING, AFLAS
20A	102270	1	O-RING, VITON (OPTION)
21	102268	1	SEAL HOUSING, P2
22	881024	1	SEAL, LIP
24	104315	1	CHECK VALVE, 1/4", 5 PSI, AFLAS
	104314	1	CHECK VALVE, 1/4", 5 PSI, VITON (OPT)
25	101058	1	1/4 x 1/4 FNPT TUBE ADAPT

NO.	REVISION	DATE	BY	APPVD
△	ADDED VITON CK VLV	09/23/24	SS	JH
△	WAS #102783 & 882911	04/05/23	SS	JH
△	WAS #102463	02/20/08	SS	X
△	WAS #101933	03/15/04	SS	X

DRAWING		LEVELS	
INJECTOR	10, 12, 14, 16, 18, 20, 24, 28,	DATE	TO SER#
FROM SER#	30, 39-41, 89, 90, 202-205	DATE	DATE
X	X	X	X

**\*TOLERANCES\***  
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.

\*TOL. DECIMALS:  
.XXX= +/- .005  
.XX= +/- .015  
.X= +/- .030  
FRAC. = +/- 1/16

\*TOL. ANGLES:  
+/- .5 DEGREES

\*CONCENTRICITY:  
.005 T.I.R.

REMOVE BURRS AND BREAK EDGES .005 MIN.


THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES

THIS PRINT SHALL NOT BE LOANED, COPIED OR REPRODUCED IN WHOLE OR IN PART NOR SHALL THE CONTENTS BE RELEASED IN ANY MANNER TO ANYONE UNLESS WRITTEN PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.


**HAMMONDS TECHNICAL SERVICES, INC.**

SCALE: **NYS**    APPROVED: PART NUMBER: \_\_\_\_\_  
 DATE: **06/20/95**    REVISED: **08/23/24**  
 DRAWING TITLE: **HAMMONDS 1P2 PUMP**  
 DRAWING NUMBER: **4567**

# Hammonds Model SPI-1 Manual

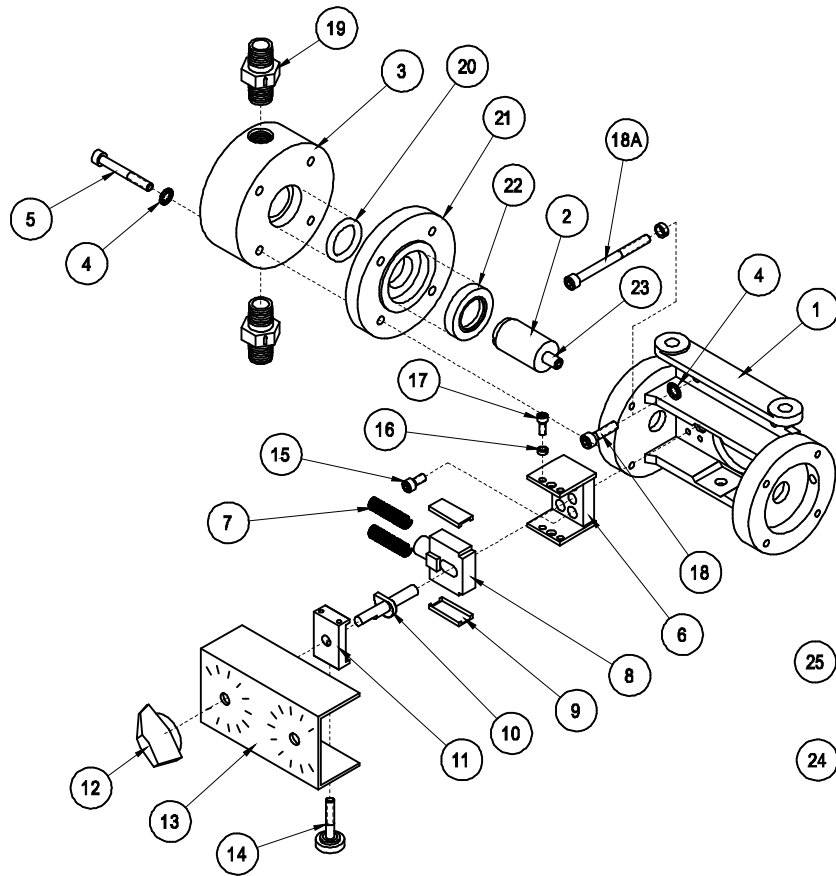

ITEM	PART NO.	QTY.	DESCRIPTION	
1	101014	1	POWER FRAME	
2	102339	1	PLUNGER, P5	
3	102340	1	FLUID END, P5	
4	882949	8	LOCK WASHER, #10 INT. TOOTH	
5	881317	4	SCREW, 10-32 x 2"	
6	101842	1	CROSSHEAD GUIDE	
7	101007	2	RETURN SPRING	
8	101006	1	CROSSHEAD	
9	101152	2	SLIDE BEARING	
10	101005	1	STROKE ADJUSTMENT CAM	
11	101003	1	CAM GUIDE	
12	101001	1	STROKE ADJUSTMENT KNOB	
13	101002	1	POWER FRAME COVER	
14	101004	1	LOCK SCREW	
15	101009	4	SCREW, 8-32 x 3/8"	
16	881086	4	LOCKWASHER, #8	
17	101010	4	SCREW, 8-32 x 3/8"	
18	881089	4	SCREW, 10-32 x 3/4"	
18A	881680	4	SCREW, 10-32 x 2 1/4" (OPTION)	
▲ 1	104311	2	CHECK VALVE, 1PSI, AFLAS	
	104310	2	CHECK VALVE, 1PSI, VITON (OPT)	
▲ 3	104318	2	CHECK VALVE, 1PSI, KALREZ (OPT)	
20	101856	1	O-RING, AFLAS	
	101857	1	O-RING, VITON (OPTION)	
▲ 3	103514	1	O-RING, KALREZ (OPTION)	
21	102341	1	SEAL HOUSING, P5	
22	881079	1	SEAL, LIP	
▲ 2	23	881045	1	SETSCREW, 1/4-20 x 1" (PART OF #2)
▲ 2	24	104315	1	CHECK VALVE, 5 PSI, AFLAS
		104314	1	CHECK VALVE, 5 PSI, VITON (OPT)
▲ 3		104319	1	CHECK VALVE, 5 PSI, KALREZ (OPT)
25	101088	1	3/8 x 1/4 FNPT TUBE ADAPT.	

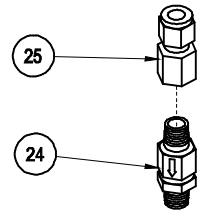

▲	NEW CHECK VALVES	05/15/23	SS	JH
▲	ADDED KALREZ OPT	06/25/09	SS	.
▲	WAS #101671	03/15/04	SS	.
▲	WAS #101933	03/15/04	SS	.
NO.	REVISION	DATE	BY	APVD

DRAWING	LEVELS		
INJECTOR	10, 12, 14, 16, 18, 20, 24, 28, 30		
	39-41, 89-93, 95-97, 99, 118, 119		
FROM SER#	DATE	TO SER#	DATE
X	X	X	X

*TOLERANCES* ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.	
*TOL. DECIMALS: .XXX ± .005 .XX ± .015 .X ± .030 FRAC. = +/- 1/16	*TOL. ANGLES: +/- .5 DEGREES
*CONCENTRICITY: .005 T. I. R.	
FINISH	REMOVE BURRS AND BREAK EDGES .005 MIN.

THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES

THIS PRINT SHALL NOT BE USED, COPIED OR REPRODUCED IN WHOLE OR IN PART NOR SHALL THE CONTENTS BE REVEALED IN ANY MANNER TO ANYONE UNLESS WRITTEN PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.

<b>HAMMONDS TECHNICAL SERVICES, INC.</b>	
SCALE: NTS	APPROVED PART NUMBER
DATE: 10/07/99	DRAWN BY: SS
DRAWING TITLE: <b>HAMMONDS 1P5 PUMP</b>	
	REVISED: 05/15/23
	DRAWING NUMBER: <b>3836</b>

# Hammonds Model SPI-1 Manual


ITEM	PART NO.	QTY.	DESCRIPTION
1	101014	1	POWER FRAME
2	102137	1	PLUNGER, P6 WITH SETSCREW
3	102138	1	FLUID END, P6
4	882949	8	LOCK WASHER, #0 INT. TOOTH
5	881317	4	SCREW, 10-32 x 2"
6	101842	1	CROSSHEAD GUIDE
7	101007	2	RETURN SPRING
8	101008	1	CROSSHEAD
9	101152	2	SLIDE BEARING
10	101005	1	STROKE ADJUSTMENT CAM
11	101003	1	CAM GUIDE
12	101001	1	STROKE ADJUSTMENT KNOB
13	101002	1	POWER FRAME COVER
14	101004	1	LOCK SCREW
15	101009	4	SCREW, 8-32 x 3/8"
16	881086	4	LOCKWASHER, #6
17	101010	4	SCREW, 6-32 x 3/8"
18	881089	4	SCREW, 10-32 x 3/4"
18A	881660	4	SCREW, 10-32 x 2 1/4" (OPTION)
19	104311	2	CHECK VALVE, 1 PSI, AFLAS
	104310	2	CHECK VALVE, VITON, 1 PSI (OPT)
	104318	2	CHECK VALVE, 1 PSI, KALREZ (OPT)
20	101491	1	O-RING, AFLAS
	101417	1	O-RING, VITON (OPTION)
	103544	1	O-RING, KALREZ (OPTION)
21	102139	1	SEAL HOUSING
22	881024	1	SEAL, LIP
24	104315	1	CHECK VALVE, 5 PSI, AFLAS
	104314	1	CHECK VALVE, 5 PSI, VITON, (OPT)
	104319	1	CHECK VALVE, 5 PSI, KALREZ, (OPT)
25	101088	1	3/8 x 1/4 FNPT TUBE ADAPT.

NO.	REVISION	DATE	BY	FROM SER#	DATE	TO SER#	DATE	VIEW
△	NEW CHECK VALVES	05/03/23	SS					
△	KALREZ OPTION	07/13/21	SS					
△	NEW CHECK VALVES	03/15/04	SS					
△	WAS #102263	09/03/02	SS					

*TOLERANCES*		*TOL. ANGLES*	
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.			
*TOL. DECIMALS:	.XXX: +/- .005	*TOL. ANGLES:	+/- .5 DEGREES
	.XX: +/- .015	*CONCENTRICITY:	.005 T.I.R.
	.X: +/- .030		

THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES		THIS PRINT SHALL NOT BE USED, COPIED OR REPRODUCED IN WHOLE OR IN PART AND SHALL BE RETURNED OR DESTROYED IN ANY MANNER TO AVOID UNLESS WRITTEN PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.	
HAMMONDS TECHNICAL SERVICES, INC.		SCALE: NTS	APPROVED BY:
DATE: 09/22/92	DRAWING TITLE: HAMMONDS 1P6 PUMP	REVISION: 05/03/23	DRAWING NUMBER: 1687

# Hammonds Model SPI-1 Manual

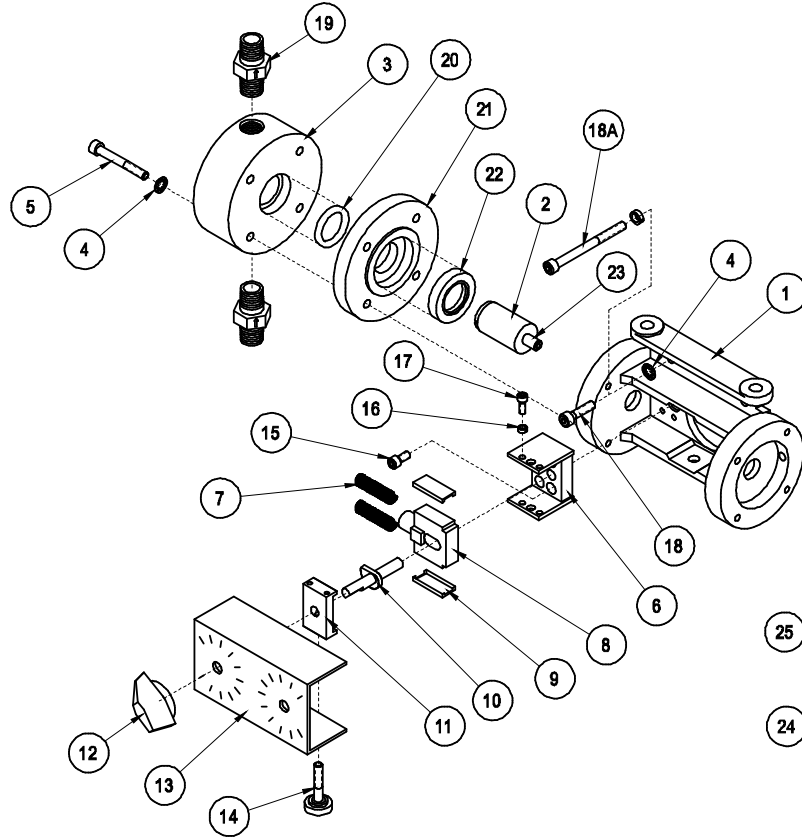

ITEM	PART NO.	QTY.	DESCRIPTION
1	101014	1	POWER FRAME
2	102192	1	PLUNGER, P7
3	102193	1	FLUID END, P7
4	882949	8	LOCK WASHER, #10 INT. TOOTH
5	881317	4	SCREW, 10-32 x 2"
6	101842	1	CROSSHEAD GUIDE
7	101007	2	RETURN SPRING
8	101006	1	CROSSHEAD
9	101152	2	SLIDE BEARING
10	101005	1	STROKE ADJUSTMENT CAM
11	101003	1	CAM GUIDE
12	101001	1	STROKE ADJUSTMENT KNOB
13	101002	1	POWER FRAME COVER
14	101004	1	LOCK SCREW
15	101009	4	SCREW, 8-32 x 3/8"
16	881086	4	LOCKWASHER, #6
17	101010	4	SCREW, 8-32 x 3/8"
18	881089	4	SCREW, 10-32 x 3/4"
18A	881660	4	SCREW, 10-32 x 2 1/4" (OPTION)
19	104311	2	CHECK VALVE, 1PSI, AFLAS
	104310	2	CHECK VALVE, 1PSI, VITON (OPTION)
	104318	2	CHECK VALVE, 1PSI, KALREZ (OPTION)
20	101490	1	O-RING, AFLAS
	101226	1	O-RING, VITON (OPTION)
	101754	1	O-RING, KALREZ (OPTION)
21	102194	1	SEAL HOUSING
22	881765	1	SEAL, LIP
23	881045	1	SETScrew, 1/4-20 x 1"
24	104315	1	CHECK VALVE, 5 PSI, AFLAS
	104314	1	CHECK VALVE, 5 PSI, VITON, (OPT)
	104319	1	CHECK VALVE, 5 PSI, KALREZ (OPT)
25	101088	1	3/8 x 1/4 FNPT TUBE ADAPT.

△	NEW CHECK VALVES	05/03/23	SS
△	ADDED PART NOS.	01/21/14	SS
△	WAS #101671	03/15/04	SS
△	WAS #101933	03/15/04	SS
△	WAS #102263	09/03/02	SS
△	WAS #101008	08/99	SS
△	ADDED INJ CHK VLV	01/06/98	SS
NO.	REVISION	DATE	BY
	X	X	X

DRAWING	LEVELS	VIEW
INJECTOR	10, 12, 14, 16, 18, 20, 24, 28, 30	I
	39-41, 89-93, 95-97, 99, 110, 111	
FROM SER#	DATE	TO SER#
X	X	X

**\*TOLERANCES\***  
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.

\*TOL. DECIMALS:  
.XXX= +/- .005  
.XX= +/- .015  
.X= +/- .030  
FRAC. = +/- 1/16

\*TOL. ANGLES:  
+/- .5 DEGREES

\*CONCENTRICITY:  
.005 T. I. R.

\*REMOVE BURRS AND BREAK EDGES .005 MIN.

THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES

THIS PRINT SHALL NOT BE USED, COPIED OR REPRODUCED IN WHOLE OR IN PART BY ANY PARTY WITHOUT THE WRITTEN PERMISSION OF HAMMONDS TECHNICAL SERVICES.

HAMMONDS TECHNICAL SERVICES, INC.			
SCALE	NTS	APPROVED PART NUMBER	DRAWN BY SS
DATE	05/11/93		REVISED 05/03/23
DRAWING TITLE			DRAWING NUMBER
HAMMONDS 1P7 PUMP ASSEMBLY			1911

# Hammonds Model SPI-1 Manual

ITEM	PART NO.	QTY.	DESCRIPTION
1	101014	1	POWER FRAME
2	102224	1	PLUNGER, P10
3	102225	1	FLUID END, P10
4	882949	8	LOCK WASHER, #10 INT. TOOTH
5	881317	4	SCREW, 10-32 x 2"
6	101842	1	CROSSHEAD GUIDE
7	101007	2	RETURN SPRING
8	101006	1	CROSSHEAD
9	101152	2	SLIDE BEARING
10	101005	1	STROKE ADJUSTMENT CAM
11	101003	1	CAM GUIDE
12	101001	1	STROKE ADJUSTMENT KNOB
13	101002	1	POWER FRAME COVER
14	101004	1	LOCK SCREW
15	101009	4	SCREW, 8-32 x 3/8"
16	881086	4	LOCKWASHER, #6
17	101010	4	SCREW, 8-32 x 3/8"
18	881089	4	SCREW, 10-32 x 3/4"
18A	881660	4	SCREW, 10-32 x 2 1/4" (OPTION)
19	104311	2	CHECK VALVE, 1 PSI, AFLAS
	104310	2	CHECK VALVE, 1 PSI, VITON, (OPT)
20	101537	1	O-RING, AFLAS
	101839	1	O-RING, VITON (OPTION)
	101883	1	O-RING, EPDM (OPTION)
21	102226	1	SEAL HOUSING
22	881908	1	SEAL, LIP
24	104315	1	CHECK VALVE, 5 PSI, AFLAS
	104314	1	CHECK VALVE, 5 PSI, VITON (OPT)
25	101088	1	3/8 x 1/4 FNPT TUBE ADAPT.

NO.	REVISION	DATE	BY	APPVD
△	NEW CHECK VALVES	05/03/23	SS	JH
△	WAS #101671	03/15/04	SS	JH
△	WAS #101933	03/15/04	SS	X
△	WAS #102263	09/03/02	SS	X
△	WAS #101008	08/99	SS	X

DRAWING		LEVELS	
INJECTOR	10, 12, 14, 16, 18, 20, 24, 28, 30	39-41, 89-93, 95-97, 99, 116, 117	
FROM SER#	DATE	TO SER#	DATE
X	X	X	X

**\*TOLERANCES\***  
ALL DIMENSIONS ARE IN INCHES UNLESS OTHERWISE SPECIFIED.

\*TOL. DECIMALS:  
.XXX = +/- .005  
.XX = +/- .015  
.X = +/- .030  
FRAC. = +/- 1/16

\*TOL. ANGLES:  
+/- .5 DEGREES

\*CONCENTRICITY:  
.005 T.I.R.

\*REMOVE BURRS AND BREAK EDGES .005 MIN.

THIS PRINT IS CONFIDENTIAL AND IS THE PROPERTY OF HAMMONDS TECHNICAL SERVICES

THIS PRINT SHALL NOT BE LOANED, COPIED OR REPRODUCED IN WHOLE OR IN PART NOR SHALL THE CONTENTS BE RELEASED IN ANY MANNER TO WHOMEVER UNLESS WRITTEN PERMISSION IS OBTAINED FROM HAMMONDS TECHNICAL SERVICES.

<b>HAMMONDS TECHNICAL SERVICES, INC.</b>			
SCALE: NTS	APPROVED PART NUMBER	DRAWN BY: SS	
DATE: 09/23/93		REVISED: 05/03/23	
DRAWING TITLE: <b>HAMMONDS 1P10 PUMP</b>			
			DRAWING NUMBER: <b>2668</b>

# Hammonds Model SPI-1 Manual

